

# Samsung GALAXY Note 3 SCL22

Basic Manual



Contents
Safety Precautions
Getting ready
Basic operation
Phone
Mail
Internet
Applications
File management
Data communication
Function settings
Overseas usage
Appendix/Index

# **Preface**

Thank you for purchasing the GALAXY Note 3 (referred to as the "product" in this manual). Before using the product, be sure to read the Setting Guide and Basic Manual (this PDF manual) to ensure correct usage.

## **Instruction Manuals**

# "Setting Guide"/"Basic Manual" (This PDF Manual)

Handles only basic operations of major functions of the product.

For detailed descriptions on various functions, refer to the Full Instruction Manual (Japanese) available on the au homepage or "Instruction Manual" application on your product.

#### http://www.au.kddi.com/support/mobile/guide/manual/

 Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and ® marks may be omitted in this manual.

# ■ Instruction Manual application

You can use "取扱説明書 (Instruction Manual)" application on the your product to check the detailed operation of this product. (In Japanese)

# In the Application screen, $[au] \rightarrow [$ 取扱説明書 (Instruction Manual)]

 When using the application for the first time, you must download and install it following the on-screen instructions.

# **Safety Precautions**

Before you start using the product, be sure to read the "Safety Precautions" to ensure correct use.

Before you assume that the product is malfunctioning, check for possible remedies in the following au Customer Support site of au homepage:

http://www.au.kddi.com/support/mobile/trouble/repair

# **Before Using the Product**

- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor reception areas.
   Communication is sometimes interrupted if you move into a poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though LTE/CDMA/GSM/UMTS system has highly secure confidential communication features.)
- This product is compatible with the international roaming service. Each network service described in this manual varies depending on the area and service content.
- Since this product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- The IMEI information of your cell phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your cell phone.
- Take care not to inconvenience people around you when you use the product in a public place.


- To use it overseas, check the condition such as regulations of the country/region.
- When the product is used by a child, parents or guardians should thoroughly read the "Basic Manual" (this manual) and teach the child how to use it.

# Use of the product is not allowed in the following places!

- Do not use a cell phone while driving a car or riding a motorbike or bicycle. It may cause a traffic accident. Use of a cell phone while driving a car or motorbike is prohibited by law. Use of a cell phone while riding a bicycle may be punishable by some regulations.
- Do not use this product while you are aboard an airplane.
   Use of electric devices transmitting radio waves in airplane is prohibited by law. Some airline companies, however, allow their passengers to use cell phones. For details, contact the airline company you use.

# List of Packaged Items

Before you start using the product, make sure that you have all the following packaged with the product.

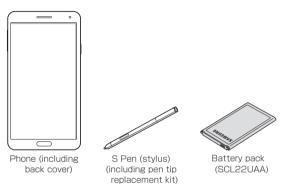

- · Stereo Headset with Microphone (sample)
- · USB 3.0 cable (sample)
- · Warranty (Japanese)
- · 取扱説明書 (Instruction Manual) (Japanese)
- ・設定ガイド (Setting Guide) (Japanese)

The following items are not included in the package.

·microSD memory card

·AC adapter

· Please purchase a specified charger (sold separately).

# Contents

Preface	ii
Instruction Manuals	ii
Safety Precautions	ii
Before Using the Product	ii
List of Packaged Items	1
Contents	2
Safety Precautions	5
Illustrations and descriptions in this Manual	
Exemptions	
Safety Precautions (Observe Strictly) Handling precautions	
Available security codes	
PIN Code	
Notes on using Bluetooth®/wireless LAN (Wi-Fi®) functions	
Notes on packet communication charge  Notes on applications	
Notes on applications	

C	Getting ready	25
	Names of parts and their functions	27
	Attaching the battery pack	
	au Micro IC Card (LTE)	
	Attaching the au Micro IC Card (LTE)	
	Removing the au Micro IC Card (LTE)	
	Charging	29
	Charging using the AC adapter (sold separately)	30
	Charging with a PC	
	Turning the power on/off	
	Turning the power on	
	Turning the power off	
	Setting the screen lock	
	Setting up a Google account on your product	
	Setting au ID	
	33.00	
E	Basic operation	32
	Using the touch panel	32
	S Pen	33
	Motion	
	S Preview	
	Using the home screen	
	Starting an application	
	Understanding icons	
	Notification panel	
	Character input	
	Switching the keyboard	
	Entering text with Samsung Japanese keypad	

Phone	47
Making calls Using history to make a call Calling overseas from au phones (au International Call Service) Receiving calls Checking your phone number	47 48 <b>49</b>
Mail	.50
Using E-mail Creating and sending E-mail Receiving E-mail Changing address Using SMS Creating and sending an SMS Receiving SMS Using PC-mail Using Gmail Creating and sending Gmail Receiving Gmail	50515151525252
Internet	.53
Using a browser  Displaying a web page  Using bookmarks/history	53


ŀ	Applications	54
	Using Contacts Registering a contact Registering your profile. Editing contacts Shooting with the camera. Before using the camera. Understanding the shooting screen. Shooting still pictures Shooting video Gallery. Viewing a still picture or video au災害対策 (au Disaster Countermeasure) Using Disaster Message Board Using Emergency Rapid Mail Using Disaster Voice Messaging Service. Using Disaster Information/Website for Donation	.54 .54 .54 .55 .55 .56 .56 .57 .57 .59
F	File management	60
	Using a microSD memory card	.60 .60 .61
	Data communication	62
	Using the wireless LAN (Wi-Fi*) function	

	Function settings	63
	Displaying the Setting menu Setting the Airplane mode Setting the Silent mode Screen lock authentication	63 64
(	Overseas usage	65
	For overseas use without anxiety Configuring the overseas settings Obtaining the PRL (Roaming Area Information) Network mode settings Making a call at your travel destination Making a call to another country (including Japan) from your tra destination	65 66 66 vel
1	Appendix/Index	67
	Introduction of related accessories Using Stereo Headset with Microphone (sample) Troubleshooting Updating Software Downloading and updating software Connecting to a PC for updating software After-sales service Main specifications	<b>68</b> <b>69</b> 69
	Specific Absorption Rate (SAR) of cell phones	73 74 74 75 76 76
I	Specific Absorption Rate (SAR) of cell phones	73 74 74 75 76 76

# Illustrations and descriptions in this Manual

## ■ Note on key illustrations

In this manual, the key illustrations are simplified as shown below.

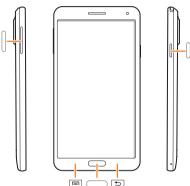

# Description of operations for selecting item/icon/key, etc.

In this manual, operation steps are described as follows. Tapping is lightly touching a key or icon displayed on the screen with your finger.

Description	Explanation
"General" tab →	Tap 🗐 in the home screen, tap "Settings" and tap "General" tab from the displayed menu, then tap "Date and time".

#### **■** Note on Screenshots

The illustrations and screenshots used in this manual are simplified and may look different from the actual screens.



# **M**emo

# **Exemptions**

- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken misoperation by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/disappearance of saved content, loss of business income, disruption of business, etc.) arising from use of or inability to use the product.

- The Company is not liable for any damages arising from failure to observe the described content of Basic Manual (this manual).
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.
- It is recommended you keep a copy of important data in your PC's hard disk, etc. Whatever the cause of fault or malfunction may be, the Company assumes no responsibility for alteration or loss of saved information.
- \* "The Company" as appears in this manual refers to the following companies: Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY Imported by: SAMSUNG ELECTRONICS JAPAN Co., Ltd. Manufactured by: Samsung Electronics Co., Ltd.

# **M**memo

- Reproduction of the content of this manual in part or in whole is prohibited.
- © Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.

# Safety Precautions (Observe Strictly)

Before using this product, thoroughly read these safety precautions for proper use. After reading, store the precautions in a safe place.

These "Safety Precautions" describe instructions that should be observed to prevent damage to property or injury to the customer or others using the product. These instructions are divided into the following categories.

#### ■ Explanation of indications used in this manual

<u> </u>	This symbol indicates the potential and imminent danger of death or serious injury <sup>(*1)</sup> to a person.
Marning (	This symbol indicates the possibility of death or serious injury $^{(*1)}$ to a person.
<b>A</b> Caution	This symbol indicates the possibility of personal injury (*2) to a person or physical damage (*3).

- \*1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or longterm hospital attendance as an outpatient.
- \*2 Injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.
- \*3 Physical damage: This refers to extended damage to buildings, furniture, livestock, or pets.

#### Explanation of graphic symbols used in this manual



Indicates an action that is not allowed.



Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.



Indicates that handling with wet hands is not allowed.



Indicates an action that must be done



Indicates that disassembly is not allowed



Indicates that the power plug must be disconnected from the nower outlet

Precautions common to the product main unit, battery pack, charging equipment, au Micro IC Card (LTE), S Pen, peripheral devices



Danger

Be sure to read the following hazards before use.



Be sure to use only the specified peripheral devices. Use of other peripheral devices might cause overheating, ignition, rupture, fault, or leakage.



Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a kotatsu, in direct sunlight, in a car in the hot sun). Doing so might cause ignition, rupture, fault, fire or injury.



Before entering an area where flammable gas is generated such as a gas station, be sure to turn off the product. Do not charge the battery. Failure to observe these precautions might cause the gas to catch fire. In addition, when using Osaifu-Keitai® at a gas station, be sure to turn off the power in advance. (If NFC/Osaifu-Keitai lock has been set, cancel the lock before turning off the power.)



Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so might cause ignition, rupture, fault, fire or injury,



Do not throw the product into a fire or heat it. Doing so might cause ignition, rupture or fire.



Do not short-circuit the connection terminals. Do not allow conductive foreign objects (metal fragments, pencil leads. etc.) to come into contact with or get inside the connection terminals. Doing so might cause fire or a fault.



When using a metal accessories, etc., take sure not to allow the metal part come in contact with the connection terminals. or power outlet. Doing so might cause electric shock, ignition. iniury or a fault.



Do not expose the camera lens to direct sunlight for an extended period. Doing so might cause ignition, rupture or fire by the light-collecting mechanism of the lens.



The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a fault, ignition, electric shock, or injury. The Company is not liable even in the event of any nonconformities arising on the product or peripheral devices as a result of modification, etc. Modification of cell phones is in violation of the Wireless Telegraphy Act.

Warning

Be sure to read the following warnings before use.



Do not drop or subject to strong impact, such as throwing. Doing so might cause rupture, overheating, ignition, leakage or a fault.



Do not use outside when you can hear thunder. Doing so might risk lightning strikes and electric shock.



Do not let your hands, fingers and other parts of the body touch the connection terminals. Doing so might cause electric shock, injury or a fault.



If the product is damaged because it is dropped or something, and its display is cracked or internal parts are exposed, do not touch the cracked display or exposed parts with your hands. Doing so might cause electric shock or injury from damaged parts. Contact an au shop or Secure cell phone support center.



If the main unit is wet, charging cause electric shock, short-circuiting or corrosion of electronic circuits, resulting in fire from heat or a fault



Do not splash with water or other liquids. Also, never use in places subject to direct splashing with water or pet urine, etc. or in humid places such as bath areas, or use with wet hands. Doing so might cause electric shock or fault from short-circuiting or corrosion of electronic circuits. In the event that the product is splashed with liquid, immediately disconnect the power plug of the specified charging equipment (sold separately). Faults caused by wetting with water or humidity are not covered by the warranty and charges will be incurred



for repair.

When removing the back cover, do not exert more than necessary force. The battery pack might jump out, for example, and cause injury or a fault.



Do not operate the product while driving an automobile or motorized bicycle, riding a bicycle or walking. Doing so may compromise traffic safety and cause an accident.



If charging is not completed after the specified charging time, stop charging. Failure to do so might cause leakage, overheating, rupture or ignition.



Do not leave in places within the reach of small children. Small children might swallow small parts, etc. by mistake and choke on them, or might drop them by mistake and cause accidents or injury.



# Caution

# Be sure to read the following cautions before use.



Do not store the product in places subject to direct sunlight (e.g. in automobiles), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so might cause overheating, ignition, deformation or a fault.



Do not leave on unstable places such as rocky stands or tilting surfaces especially while the vibration mode set. Dropping the product may cause injury or damage. Also, pay sufficient attention to impact, etc.



Do not cover or wrap the product with bedding, etc. while using or charging the product. Doing so might cause fire, fault or injury.



Do not touch the main unit or the specified AC adapter (sold separately) for a long time while power is being supplied from an external source. Doing so might cause low-temperature burns.



The product may become hot by prolonged use especially in high-temperature environment. Be careful when using the product touching your skin for a long time, as it might cause low-temperature burns.



Do not use power outlets or wiring apparatus beyond its rating. Also, exceeding rating, for example, by connecting multiple devices to a single power strip might cause overheating and fire.




Do not use the product with the back cover removed.





Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so might cause a fault or loss of internal data.




Do not leave or store with the back cover removed from the main unit. Doing so might allow dust or other foreign objects to get inside and cause a fault.

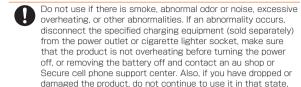

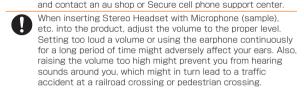

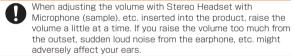

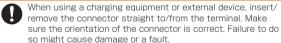

#### ■ Main unit



# Warning

# Be sure to read the following warnings before use.



Do not use a cell phone while driving a car or riding a motorbike or bicycle. It may cause a traffic accident. Use of a cell phone while driving a car or motorbike is prohibited by law. Use of a cell phone while riding a bicycle may be punishable by some regulations.



Do not use the product while you are aboard an airplane. Use of electric devices transmitting radio waves in airplane is prohibited by law. Some airline companies, however, allow their passengers to use cell phones. For details, contact the airline company you use.



The product sometimes affects high-precision electronic devices. So, turn it off near such devices. (Examples of electronic devices that might be affected by the product include cardiac pacemakers, hearing aids, other electronic medical devices, fire alarms, and automatic doors. If you are using an electronic medical device, contact the device manufacturer or retailer for information about the possible affect of radio wayes.)



When using the product near an implanted pacemaker, implanted cardioverter-defibrillator or other electronic medical device, radio waves might affect these units and devices. So, please observe the following.

- Those with an implanted pacemaker or implanted cardioverter-defibrillator should carry or use the product at least 15 cm away from the pacemaker or cardioverterdefibrillator.
- 2. Turn the product off or turn "Airplane mode" on when it may be difficult to keep at least 15 cm away from others such as in a situation you cannot move freely, since there may be people with a cardiac pacemaker or implanted cardioverterdefibrillator nearby.
- 3. Pay attention to the following points when using the product inside medical institutions.
  - Do not bring the product into operating theaters, intensivecare units (ICU) and coronary care units (CCU).
  - Turn the product off in hospital wards.
  - Even if you are in a lobby, etc., be sure to turn the product off when there are electronic medical devices nearby.
  - When a medical institution has laid down designated areas where use of the product is prohibited or is not allowed to be brought in, abide by the instructions of that medical institution
- 4. When using electronic medical devices other than an implanted pacemaker and implanted cardioverter-defibrillator outside a medical institution (e.g. home medical treatment), check individually with the manufacturer of the electronic medical device regarding the influence of radio waves.



Stay alert to your surroundings when calling, messaging, browsing the Internet, shooting photos, playing games, watching TV (1Seg) or listening to music. Failure to do so might cause a fall or traffic accident.



Do not light the light in front of a person's eyes. Do not gaze at the light emitting part when the light is lighted. Doing so might cause impairment of eyesight, etc. Be especially careful not to shoot small children from a very close distance.



Do not light the light toward a driver of a car, motorbike or bicycle. If dazzled by the light, the driver might become unable to drive and cause an accident.



Sometimes, very rarely some people demonstrate symptoms such as temporary muscle spasms, loss of consciousness, etc. by watching repeatedly flickering screens. Those with a past history of this should consult with a physician beforehand.



Be sure to read the following cautions before use.



Use of the main unit in an automobile might sometimes affect on-vehicle electronic devices, though this rarely happens. If this happens, stop use since this may impair safe travel.



If you feel any abnormality with your skin, immediately consult a dernatologist. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition. The materials of parts used on the product are as follows.

Pa	art	Material	Surface treatment
Display		Glass	-
Exterior case (surround)	Front (window)	PC	Deposition Hairline finish (horizontal)
	Back	PA+GF50	Coating
Side keys ( Zoom, Pow lock keys)		Aluminum	Anodic oxidation White coating
Back cover	-	PC	Coating
Home key (	(white)	Aluminium	Anodic oxidation Hairline finish (horizontal)
Camera len	is panel	Glass	_
Camera len surrounding		Aluminum	Anodic oxidation
Top of 1Se	g antenna	PC	Deposition

Part	Material	Surface treatment
Light panel	Transparent acrylic	_
Speaker	Stainless steel	Polished finish
Earpiece surrounding	Stainless steel	Polished finish
area		



Do not bring the product close to magnetized objects such as cash cards, floppy disks, credit cards, and prepaid cards. Doing so might result in loss of recorded information.



Do not allow liquids, metal objects, burnable items, and other foreign matter to get inside au Micro IC Card (LTE) slot and the microSD memory card slot. Failure to do so might cause fire, electric shock or a fault.



Do not swing the product around by holding Stereo Headset with Microphone (sample), etc. Doing so might cause an accident or damage.



Stow the 1Seg antenna when not watching TV (1Seg). If you operate the product for calling, etc. with the 1Seg antenna extended, it might cause unexpected injury by hitting your face, etc.



If you have a weak heart, be careful when setting the incoming vibration and ringtone volume to prevent adverse effects on your heart.



Pay attention to items becoming stuck to the main unit. The speaker uses magnets, and so thumbtacks and pins, craft knife blades, staples, and other metal objects sometimes become stuck to the main unit, and cause unexpected injury. Before using the product, be sure to check that there are no foreign objects on the speaker or other parts.



Do not put the product directly on sand at a beach, etc. Sand or other small particles might get inside the earpiece, microphone or speaker, causing the volume to drop. If sand gets inside the product's main unit, it might cause overheating or a fault.



When using the product for calling or data communication, be careful not to keep the product in direct contact with your skin for a prolonged period, or not to cover the product with paper, cloth, bedding, etc. The main unit might get hot, causing fire, burns or a fault.

#### Battery pack



(The battery pack of the product is a lithium-ion battery.)

The battery pack is not fully charged at the time of purchase. Charge the battery before using the product.

# ♠ Danger

Be sure to read the following hazards before use.



Do not short-circuit the positive (+) and negative (-) terminals of the battery pack.



Connect the battery pack to the product in the correct orientation. Connecting in an incorrect orientation might cause rupture, fire or overheating. Do not try to forcibly connect the battery pack, instead thoroughly check the connection terminals carefully before connection.



Do not puncture the battery pack with a nail, hit it with a hammer or step on it. Doing so might cause ignition or damage.



Do not allow metal objects (such as necklaces and hairpins) to come in contact with the connection terminals when carrying or storing the battery pack. Doing so might cause fire or a fault due to a short circuit.



Do not disassemble, modify or directly solder the battery pack. Doing so might cause spilling of the battery liquid resulting in an accident such as loss of eyesight if it gets into eyes, or cause overheating, ignition or rupture.



Do not use a battery pack that has been dropped, stepped on, damaged, or leaking battery liquid. Immediately move the battery pack away from fire if you notice leakage of liquid or unusual odor. Failure to do so might cause the leaked liquid to catch fire resulting in ignition or rupture.



Do not wet the battery pack with water, seawater, pet urine, etc. A wet battery pack might cause overheating, rupture or ignition. If you drop the product into water by mistake, immediately turn off the power, remove the battery pack, and contact an au shop or Secure cell phone support center. Never charge the wet battery pack.



If the leaked liquid gets on your skin or clothes, immediately rinse it off with water to avoid injury. If the liquid gets into your eyes, do not rub but wash your eyes with water, and immediately consult a doctor to avoid the risk of losing your eyesight. If the liquid gets on a device, wipe it off without touching it.



The battery pack is a consumable item. If the performance of a battery pack does not recover (e.g. the usable time after each charge has become extremely short), the battery pack is at the end of service life, so stop use and buy a new one of the specified type. Failure to do so might cause overheating, ignition, rupture or leakage. Note that the length of service life varies depending on the usage condition, etc.



Be careful not to have the battery pack bitten by your pet. It might cause leakage, overheating, rupture or ignition of the battery pack.

#### Charging equipment

# **Marning**

Be sure to read the following warnings before use.



Do not use at other voltages than the specified power supply voltage. Doing so might cause ignition, fire, overheating or electric shock.

- · AC adapter (sold separately): 100 VAC to 240 VAC
- DC adapter (sold separately): 12/24 VDC (for negative grounded vehicles only)
- \* Use the specified charging equipment (sold separately).



Firmly insert the power plug of the specified charging equipment (sold separately) into the power outlet or cigarette lighter socket down to the base of its pins. Incomplete insertion of the power plug might result in electric shock or fire caused by overheating and ignition. Do not use damaged specified charging equipment (sold separately) or loosen power outlets or cigarette lighter socket.



If the fuse in the common DC adapter 03 (sold separately) blows, replace it with a fuse of the specified type (250 V, 1 A). Replacing with a different type of fuse might cause overheating or ignition. (For information about fuse replacement, carefully read the manual for the common DC adapter 03 (sold separately).)



Do not damage, modify, twist, pull or place a heavy object on the power cord of the specified charging equipment (sold separately). Do not use a damaged cord. Doing so might cause an electric shock, short circuit or fire.



Do not let your hands, fingers and other parts of the body touch the connection terminals. Doing so might cause electric shock, injury or a fault.



If you hear thunder, do not touch the power plug. Doing so might cause an electric shock as a result of a lightning strike.



Before cleaning the specified charging equipment (sold separately), unplug its power plug from the power outlet or cigarette lighter socket. If the plug remains plugged in when you clean the equipment, it might cause an electric shock or short circuit.



Wipe off dust on the power plug. Failure to do so might cause fire, burn or electric shock



Install and position in-car devices where they do not hinder driving or safety equipment such as airbags. Failure to do so might cause a traffic accident. Install in-car devices following the instructions of their manuals.



When the specified charging equipment (sold separately) is not to be used for a long time, disconnect the power plug of the specified charging equipment (sold separately) from the power outlet or cigarette lighter socket. Failure to do so might cause electric shock, fire or a fault.



Do not use in places subject to direct splashing with water, pet urine or other liquids. Doing so might result in faults resulting from overheating, fire, electric shock, or short-circuiting of electronic circuits. In the event that the product is splashed with liquid, immediately disconnect the power plug of the specified charging equipment (sold separately).



#### Caution

Be sure to read the following cautions before use.



Do not use in humid places such as bath areas, or connect/ disconnect the specified charging equipment (sold separately) with wet hands. Doing so might cause electric shock or a fault.



Charge the battery in a stable place especially while the vibration mode set. If placed on an inclined surface or wobbly stand, the product might fall causing injury or damage. In addition, do not cover or wrap the product with a cloth or bedding. Doing so might cause fire or a fault.



When unplugging the power plug of the specified charging equipment (sold separately) from the power outlet or cigarette lighter socket, hold and pull the power plug. If you pull the cord, the cord might be damaged.



Do not use the common DC adapter O3 (sold separately) with the car engine stopped. Doing so might result in draining of the car battery.



Do not leave the specified charging equipment (sold separately) connected to the main unit with the battery pack removed. Doing so might cause ignition or electric shock.

#### au Micro IC Card (LTE)



## Warning

Be sure to read the following warnings before use.



Do not put the au Micro IC Card (LTE) in a cooking apparatus such as a microwave oven or a pressure vessel. Doing so might cause melting, overheating, fuming, loss of data or a fault.



#### Caution

Be sure to read the following cautions before use.



Watch your hand or finger when attaching/removing the au Micro IC Card (LTE). May injure your hands or fingers.



Use only the devices specified by the Company to insert the au Micro IC Card (LTE) in. Using a device not specified by the Company might cause loss of data or a fault. For the specified devices, contact an au shop or Customer Service Center.



Do not disassemble or modify the au Micro IC Card (LTE). Doing so might cause loss of data or a fault.



Do not use or leave the au Micro IC Card (LTE) in hot places such as by the fire or a heater. Doing so might cause melting, overheating, fuming, loss of data or a fault.



Do not touch the IC (metal) part of the au Micro IC Card (LTE) or short-circuit it. Doing so might cause loss of data or a fault.

Do not drop the au Micro IC Card (LTE) or subject it to strong impact. Doing so may cause a fault.

Do not fold, bend or place a heavy object on the au Micro IC Card (LTE). Doing so may cause a fault.

Do not wet the au Micro IC Card (LTE). Doing so may cause a fault.

Do not scratch the IC (metal) part of the au Micro IC Card (LTE). Doing so may cause a fault.

O not store the au Micro IC Card (LTE) in dusty places. Doing so may cause a fault.

Do not store the au Micro IC Card (LTE) in places exposed to direct sunlight or hot and humid places. Doing so might cause a fault.

Store the au Micro IC Card (LTE) out of reach of small children. Failure to do so might cause injury or asphyxiation, etc. if they accidentally swallow and choke on it.

#### S Pen

Warning Be sure before u

Be sure to read the following warnings before use.

Do not point S Pen toward others. Doing so might cause injuries or blindness to yourself or others by hitting.

Do not swing the product holding S Pen when it is attached to the main unit. Doing so might cause accident such as injuries to yourself or others by hitting.

Guardians should teach child how to use the product. Also, observe if the child is using the product as instructed. Failure to do so might cause injury, etc.

Store S Pen out of reach of small children. Failure to do so might cause mis-swallowing, injury, etc.

# **Caution**

Be sure to read the following cautions before use.



If you feel any abnormality with your skin, immediately consult a dernatologist. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition. The materials of parts used on S Pen are as follows.

Part	Material	Surface treatment
Main unit, Button	ABS	Grain finish (NIHON
		ETCHING No.1 (S))
Head part	ABS	PVD + UV coating
Pen tip	TPE	_
Pen tip (pen tip replacement kit)	POM, elastomer	_
Tweezers (pen tip replacement kit)	SUS301	_

## ■ Stereo Headset with Microphone (sample)

# Warning

Be sure to read the following warnings before use.



Do not use the product for playing game or music while driving a car or motorbike, riding a bicycle or walking. Doing so may compromise traffic safety and cause an accident.



#### Caution

Be sure to read the following warnings before use.



When playing game or music, adjust the volume to the proper level. Setting too loud volume or using the earphone continuously for a long period of time might cause hearing loss. Even if the proper volume is applied, using for a long time may cause hearing loss. Also, raising the volume too high might prevent you from hearing sounds around you, which might in turn lead to a traffic accident at a railroad crossing or pedestrian crossing.



Do not wrap the cord around the product. It may lower its sensitivity and the sound may cut off or noise may be generated. Do not pull the code to unplug. Do not hang the phone with the code, either. It may damage the code. connector plug and the headset connection terminal of the product.



Be aware not to gather dust on the connecter terminal. Doing so may cause a fault.



Attach or remove the connecter horizontally to or from the headset connection terminal of the product.



When adjusting the volume, raise the volume a little at a time. If you raise the volume too much from the outset, sudden loud noise from the earphone, etc. might adversely affect your ears.



If you feel any abnormality with your skin, immediately consult a dermatologist, Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition. The materials of parts used on the Stereo Headset with Microphone (sample) are as follows.

Part	Material	Surface treatment
Housing	PC	UV coating
Cable	NON PVC	-
Exterior of S Pen	PC, ABS	UV coating
Earpieces	Silicon	_

#### ■ USB 3.0 cable (sample)



#### Be sure to read the following warnings before use.



If you feel any abnormality with your skin, immediately consult a dermatologist, Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition. The materials of parts used on USB 3.0 cable (sample) are as follows.

Part	Material	Surface treatment
USB connector part	SPCC	-
microUSB connector part	HTN, STS304	Nickel plating
Connector case	PC	UV coating
Cable	TPE (Non pvc)	_

# **Handling precautions**

These precautions are provided to ensure that performance can be fully demonstrated. Thoroughly read these precautions to ensure correct use.

- Precautions common to the main unit, battery pack, charging equipment, au Micro IC Card (LTE), S Pen, peripheral devices
- Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board resulting in a malfunction. Keeping an external device connected to the microUSB connection terminal or headset connection terminal might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage.
- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
- Do not use in places subject to lots of dust or vibration.
- Clean the connection terminals with dry cotton swabs, etc. every now and then. Soiled terminals might cause poor connection.
   Do not exert a strong force to clean the connection terminals to prevent deformation.
- Clean the product with a soft dry cloth (such as the type used for eyeglasses). Forceful rubbing with a dry cloth may scratch the display. The display may be stained if splash or smear is left attached to the surface. Wiping the product using alcohol, thinner, benzine, detergent, etc. might erase the printing on the outer casing or cause discoloration.
- Use as far away as possible from land-line phones, TVs, radios, etc.
   Use nearby might affect them.
- The product may become warm while charging or during other operations, depending on the situation, but this is not abnormal.

- When the product is used by a child, parents or guardians should thoroughly read this manual or the full "Instruction Manual" (Japanese) and teach the child how to use it.
- Turn off the power before removing the battery pack. If you remove the battery pack with the power on, saved data might be altered or lost

#### ■ Main unit

- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.
- Do not forcefully press your fingernails, sharp objects or hard objects against keys or display surface. Doing so might cause scratching or damage. The touch panel is designed to be lightly touched by fingers or S Pen. Do not apply strong pressure with your fingers or sharp-pointed objects (such as fingernails, ballpoint pens and pins) on the touch panel.

In the following cases, the product may not respond to touching the touch panel, or errors in operation may occur.

- · Operation with gloved hands
- · Operation with fingernails
- · Operation with a foreign object placed on the touch panel
- · Operation with a protective sheet or sticker on the touch panel
- · Operation with wet or sweaty fingers
- Do not remove the stickers printed with IMEI (International Mobile Equipment Identity) that can be seen when the battery pack is removed. These stickers prove that the product and the communication module you are using comply with the Wireless Telegraphy Act and Telecommunications Operations Act.

- Never use modified au cell phones. Use of a modified device violates the Radio Law. The product has acquired the certification of conformity with technical regulations for the specified radio station based on the Radio Law, and the "Technical Conformity Mark is printed on the nameplate of the product as a certificate. If the screws of the product are removed and modifications are made to the internal components, the certification of conformity with technical regulations will become invalid. Never use the product without the valid certification. Doing so violates the Radio Law.
- To prevent unlawful modification, the product has been designed so that it cannot be easily disassembled. Modifying the product is prohibited by the Radio Law.
- Contents saved in this product, such as contacts, mails and bookmarks, might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assume no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that content data (both charged or free content) saved on the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.
- Although the organic EL (OLED) display used on the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. Or color may be changed or unevenness of brightness may be shown if looked at from different angles. Note that that is because of the structure of OLED display, not a fault.
- Although lightning intensity of OLED can be decreased partly
  when the same image has been displayed for a long time, extreme
  continuous use is performed with "Brightness" setting of "Display"
  set to be always bright, it is not abnormal because that is the
  characteristic of OLED.
- Leaving the OLED exposed to the direct sunlight might cause a fault.
   Take care when you place the product by the window or outside.
- Brightness of the display may become dropped because of increasing the temperature of the product or decreasing the battery level.
- Take care not to inconvenience people around you when you use the product in a public place.

- You are recommended to store copies of individual data such as photos you took, videos and music in your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of some copyrighted data even by the abovementioned means.
- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause malfunction. Putting strong magnetism close to the product might cause false operation.
- When you put the product in your pocket or bag, take care so that the display does not come in contact with metal objects or other hard objects, as it might cause scratching or damage.
- When suddenly brought into a warm place from a cold place, or when in a humid location, or when used where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water droplets (i.e. condensation) sometimes are formed inside the product. Note that when used under conditions such as this, humidity might cause corrosion or a fault.
- When wiping the display, wipe with a soft, dry cloth. Use of a moistened cloth, glass cleaner or other similar liquid might cause a fault.
- When connecting/disconnecting an external device to/from the microUSB connection terminal or headset connection terminal, make sure that the connector of the external device is straight with the connector terminal.
- Note that applying unnecessary force with an external device connected to the microUSB connection terminal or headset connection terminal might cause damage.
- Do not discard the product together with regular trash. Please cooperate in the collection of au phone when it is no longer needed to protect the environment and effectively use resources. Old au phones are collected at au shops and other places.

- Insert only a microSD memory card into the memory card slot on the product.
- Do not exert excessive force when attaching/removing a microSD memory card. Doing so might injure your hands or fingers.
- While writing/reading data to/from a microSD memory card, do not subject the product to vibration or impact, remove the battery pack or turn off the power. Doing so might cause loss of data or a fault.
- When hearing the other party's voice, make sure that the earpiece is placed at the center of your ear. If the earpiece (audio output port) is closed by the ear lobe, it may be hard to hear the voice.
- Even if you cover the microphone to make your voice inaudible to the other party, the other party can hear your voice.
- When using handsfree call, take care to keep the speaker at a safe distance from your ears, as the speaker volume may be too loud.
- Do not cover the light sensor with your finger or put a sticker on it.
   Doing so may hinder the light sensor from detecting the ambient brightness and functioning correctly.
- Do not put a sticker, etc. on the proximity sensor. Doing so may cause the sensor to malfunction and make the display always turned off while receiving a call or during a call.
- Do not cover microphones (3 microphones) with your fingers, etc. It
  may make your voice inaudible to the other party and sound difficult
  to be recorded or detected.

#### ■ Touch Panel

- Use your finger or S Pen to operate the touch panel. Do not use ballpoint pens, pencils or other sharp-pointed objects. Using such objects does not only hinder correct operation of the touch panel, but also might cause scratching or damage to the display.
- Do not put stickers or sheets (e.g. commercially available protective films, peep prevention sheets) on the display. Doing so might hinder correct operation of the touch panel.
- Do not operate the touch panel with fingernails. Doing so might result in split nails or jammed fingers.
- If the display surface is dirty or wet with sweat or water, it may not function correctly. In such case, wipe the display surface with a dry, soft cloth.
- When carrying the product in your pocket or bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.

#### ■ Battery pack

- Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time. This will also shorten the battery pack's service life. Try to use the battery pack as far as possible at room temperature.
- When the battery pack is not to be used for a long time, remove the battery pack from the main unit, and store it away from hot and humid places.
- Charge the battery before using the product for the first time after purchase, or if you have not used the product for a long time.
- The battery pack is a consumable item. If the performance of a battery pack does not recover after charge, the battery pack is at the end of service life, so buy a new one of the specified type. Note that the length of service life varies depending on the usage condition, etc.

- Do not discard battery packs together with regular trash. Please cooperate in the collection of used battery packs to protect the environment and effectively use resources. au shops and other retailers collect used battery packs.
- Battery packs sometimes swell up as they approach the end of their service life. This is due to the properties of lithium-ion batteries, and is not a problem in terms of safety.
- FeliCa antenna and NFC antenna are embedded in the battery pack.
   Handle it properly.

#### ■ Charging equipment

- When not using the specified charging equipment (sold separately), remove the plug from the power outlet or cigarette lighter socket.
- Do not wrap the cord of the specified charging equipment (sold separately) around the equipment itself. Doing so might cause electric shock, overheating or fire.
- Do not forcibly bend the plug of the charging equipment's plug or the connection between the connector and power cord. Doing so might cause electric shock, overheating or fire.

#### ■ au Micro IC Card (LTE)

- The au Micro IC Card (LTE) is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When malfunction is suspected, or in case of theft or loss, contact an au shop or PiPit.
- Do not forcibly remove or insert the au Micro IC Card (LTE). Be careful not to exert excessive force when inserting the card into your au cell phone.
- You are responsible for any damage caused by inserting your au Micro IC Card (LTE) into some other IC card reader/writer, etc.
- Keep the IC (metal) part of your au Micro IC Card (LTE) clean.
   Wipe the card with a soft dry cloth (such as the type used for eyeglasses) for cleaning.
- Do not put stickers, etc. on the au Micro IC Card (LTE).
- Do not insert an au Nano IC Card (LTE) to which a conversion adapter is attached. Doing so may cause a fault.

#### S Pen

- Do not use S Pen when the tip is chipped or scraped. The display may be damaged or malfunction.
- Do not use other S Pen besides specified one. The display may be damaged or malfunction.
- Do not use S Pen for other devices. The device may be damaged or malfunction.
- Do not apply excessive force to S Pen during use. Putting S Pen into a tightly packed bag, or putting S Pen in clothes pocket and sitting on it may cause damage or malfunction.

#### ■ Camera

- When using the camera, follow common rules of etiquette regarding camera use.
- Image data might be altered or lost due to malfunction, repair or mishandling of this product. The Company takes no responsibility for recovery of altered or lost data, damages resulting from altered or lost data, and lost profits.
- When photographing important occasions (such as a wedding), take a trial shot and check the shot image to make sure it is correctly shot.
- Do not use the camera for recording commercially available books or information of which photographing is not allowed.
- Do not leave the camera lens exposed to direct sunlight. Imaging elements might be discolored or burnt.

## ■ Music, videos and TV (1Seg)

Do not listen to music or watch videos or TV (1Seg) while driving a car or motorbike, or riding a bicycle. Use of cell phones while driving a car or motorbike is prohibited by law. (Use of cell phones while riding a bicycle may also be punishable by law.) In addition, stay alert to the traffic around you even when walking. Surrounding sounds may not be heard clearly, and gazing at the screen might distract your attention causing a traffic accident. Be especially careful at railroad crossings, station platform and pedestrian crossings.

- Take care not to listen at ear-splitting volume for a long time, as it might affect hearing.
- Be careful of sound leakage from Stereo Headset with Microphone (sample) in trains or other places with many people around you.

#### ■ Copyrights and rights of portrait

- You are not allowed to copy, distribute, publish, modify or edit the data you shot, recorded or downloaded using this product without consent of the copyright holder, except for personal use, under the copyright law. In addition, do not use or modify portraits or names of other individuals without their consent, as it might infringe on rights of portrait.
  - Note that shooting and recording may be restricted at some live performances, shows and exhibitions even for personal use.
- Be careful about the copyright and portrait right when posting photos you shot, etc. on Internet homepages.

#### ■ Backup content on the product

- Please <u>back up\*1</u> important content recorded or downloaded to the product to an outside source. <u>Content recorded to memory on the</u> <u>product sometimes disappears or is altered</u> by unexpected factors, such as static electricity or a fault, repair, mishandling, etc.
  - \*1 How to make backups:
    - Store important data such as phonebook data, music, shot photos and videos on microSD memory cards. You can also send files as mail attachment or transfer to your PC. Note, however, that there are some data that cannot be cooled by using these means.

# Available security codes

The product has various security codes that you can use. The available security codes are as follows. Do not forget the various security codes that are set as they are necessary for various operations and contracts.

#### Security code

Exampl	le of	① To do remote operation of Voice mail and Call
usage		forwarding services from a landline phone
		To use Customer Service Center and to do various inquiries, applications, and modifications on the au homepage
Initial v	alue	A four-digit number chosen by the customer and noted on the application form

#### Pattern/PIN/password to unlock screen

Example of	To set and release the screen lock	ĺ
usage		ı
Initial value	None	ĺ

#### PIN code

	To prevent unauthorized use of the au Micro IC Card (LTE) by third parties
Initial value	1234

#### Lock No. (NFC/Osaifu-Keitai lock)

Example of	To set the "NFC/Osaifu-Keitai lock setting"
usage	
Initial value	1234

## **PIN Code**

#### **■ PIN Code**

To prevent unauthorized use of the au Micro IC Card (LTE) by a third party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether PIN code entry is required.

If the PIN code is incorrectly entered three times consecutively, the PIN code will be locked. Use the PUK code to unlock the PIN code.

 PIN code is "1234" and PIN code entry is set to not be required at the time of purchase. You can change PIN code to any four- to eight-digit number, and set PIN code entry to be required as necessary.

#### **PUK Code**

In case PIN code is locked, you can unlock it by entering PUK code.

- PUK code is an eight-digit number given at the time of purchase, which is printed on the back side of the plastic card where your au Micro IC Card (LTE) is attached.
- After entering PUK code, you need to set a new PIN code.
- If the PUK code is incorrectly entered ten times consecutively, contact an au shop, PiPit or the Customer Service Center.
- "PIN code" is not reset by initializing the product.

# Notes on using Bluetooth®/wireless LAN (Wi-Fi®) functions

- The Bluetooth® function and wireless LAN (Wi-Fi®) function of this product conform to the domestic standards of Japan, FCC standards and EC Declaration, and have been certified.
- Use the wireless LAN (Wi-Fi®) function in Japan. The wireless LAN (Wi-Fi®) function of this product conforms to domestic wireless standards in Japan, and has been certified. Use overseas may be subject to punishment by law.
- The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is shared by various other devices. For this reason, the communication speed and connectable range may be decreased, or disconnection may occur, due to interference by other devices.
- Do not use this product in places where electromagnetic waves are generated or near electric products, AV and OA equipment, or other magnetized devices.
- Subjecting this product to magnetic or electrical noise might increase noise and prevent it from performing communications. (This product is particularly susceptible to noise when it used near a microwave oven.)
- Using this product near a TV, radio or similar appliance might cause reception interference and disrupt TV images.
- Searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near to the product or the same channel is being used.

- The wireless LAN (Wi-Fi®) function cannot be used in airplane. Be sure to turn off the power even in a wireless LAN (Wi-Fi®) compliant airplane. Some airline companies, however, allow their passengers to use cell phones. For details, contact the airline company you use.
- The communication speed and connectable range vary depending on the distance between communication devices obstacles and the Bluetooth® devices used.

#### ■ 2.4 GHz frequency band precautions

The frequencies used by the Bluetooth® and/or wireless LAN (Wi-Fi®) function of this product are in the 2.4 GHz band. In this frequency band, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license for use, such as factory production lines, specific small power wireless stations that do not require licenses, amateur wireless stations (collectively called "other wireless stations" from here on) are operated in addition to home electrical appliances such as microwave ovens, devices for industrial, scientific and medical devices.

1. Before using this product, make sure that "other wireless stations" are not in operation nearby.

- 2. In the event that instances of radio wave interference have occurred between this product and "other wireless stations", immediately either relocate this product or stop operation of the device (stop emission of radio waves).
- If you are unclear on any points or are troubled by anything, contact an au shop or Customer Service Center.

# **#**memo

- © Connections between this product and all other Bluetooth® and wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore, connections with all Bluetooth® and wireless LAN (Wi-Fi®) devices are not guaranteed.
- This product supports security features for wireless communications that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN (Wi-Fi®) function.
- Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected anywhere within the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may obtain unauthorized access if security settings have not been configured. You are recommended to configure security settings before using wireless LAN (Wi-Fi®) at your decision and responsibility.
- The Company assumes no responsibility for leakage of data or information that may occur during Bluetooth®/wireless LAN (Wi-Fi®) communication.
- Since Bluetooth® and wireless LAN (Wi-Fi®) functions use the same frequency band, using the both functions at the same may cause radio wave interference resulting in decreased communication speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and wireless LAN (Wi-Fi®) functions.

Bluetooth® and wireless LAN (Wi-Fi®) functions of this product use frequencies in the 2.4 GHz band.

2.4 FH1 / DS4 / OF4 / XX8

- Bluetooth\* function: 2.4FH1/XX8
   This product uses the 2.4 GHz band. For FH1, FH-SS is used as the modulation scheme. The interference distance is about 10 m or less. XX8 uses other schemes and interference distance is about 80 m or less.
- Wireless LAN (Wi-Fi\*) function: 2.4DS/0F4
   This product uses the 2.4 GHz band. DS-SS and OFDM are used as the modulation schemes. The interference distance is about 40 m or less.

 This means that all bandwidths can be used, and that bands of mobile unit identification devices cannot be avoided.

Available channels differ depending on the country. For use in airplane, check with the airline company in advance.

#### ■ 5 GHz frequency band precautions

Wireless LAN (Wi-Fi®) function of this product uses 5 GHz band. Using 5.2 GHz band and 5.3 GHz band outdoors is prohibited by the Radio Law.

The channels used on the product are as follows.

W52 (5.2 GHz band/36, 40, 44, 48 ch)

W53 (5.3 GHz band/52, 56, 60, 64 ch)

W56 (5.6 GHz band/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140 ch)

# Notes on packet communication charge

- Since constant Internet connection is possible with this product, packet communication may be performed automatically by some applications, resulting in high packet communication charges. Therefore, subscription to a packet communication charge discount service or flat late plan is recommended.
- To browse homepages, download applications, communicate using applications, send/receive E-mails and configure various settings, connection to the Internet is required, to which packet communication charge applies.
- \* Packet communication charge does not apply to Wi-Fi connection.


# Notes on applications

- Be sure to check the security of the application, then install it at your own risk. Some applications might cause virus infection, damage various data, and send out your location information, usage history or personal information stored in your cell phone via the Internet.
- The Company assumes no responsibility for any problems that might be caused by applications you have installed.
   In such case, you may be charged a repair fee even during the warranty period.
- The Company assumes no responsibility for any disadvantage brought to you or any third party by applications you have installed.
- Insertion of a microSD memory card is necessary to use some applications.

- Some applications prohibit the product from entering sleep mode while they are active, or rapidly drain the battery while running in the background.
- Operation procedures and screen appearances of the applications preinstalled in this product and those installed by you are subject to change without notice as a result of version upgrade. In addition, operation procedures described in this manual may differ from the actual procedures.

# **Getting ready**

# Names of parts and their functions

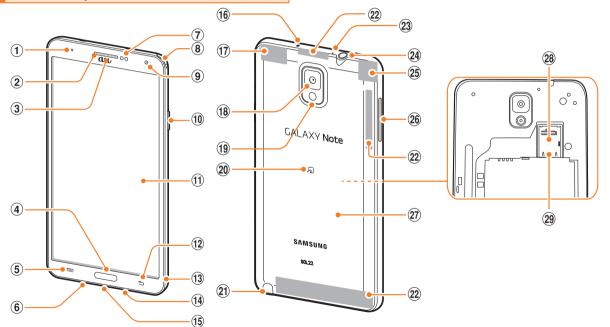

#### 1 Notification LED

Notify missed calls, indicate charging status, etc. only while the display backlight is turned off.

② Microphone (hole on the left side of Earpiece)\*1
Use for handsfree calling or S Voice.

#### ③ Earpiece

Other party's voice is heard.

#### 4 Home key

Return to the Home screen. Press and hold for over one second to display recent used applications.

#### ⑤ ■ Menu key

Display menus corresponding operations. Press and hold to activate S Finder.

#### ⑥ Microphone (lower)\*1

Use for calling, recording, and Google Voice Input.

#### ⑦ Proximity/Light/Gesture sensor\*2

Turn off display and adjust the display brightness when proximity of face is detected or according to the ambient brightness. Also, operate the product by detecting hand movement (gesture).

#### 8 1Seg antenna

Extend to watch TV (1Seg). Even when the antenna is extended during a call or while using the browser, calling or data communication is not affected.

#### In-camera

Use when shooting yourself, etc.

#### 10 Power key/Screen lock key

Press and hold to turn the power on.

Press while the power on to set screen lock. Press and hold for over one second to power off, toggle Airplane mode on/off, restart, toggle Emergency mode on/off, and set silent mode.

- 11 Display (Touch panel)
- 12 🔁 Back key

End applications or return to the previous screen.

- (3) Temperature/humidity sensor
- (1) Speaker

Ringtone and other party's voice during handsfree call are heard from hear.

- 15 microUSB connection terminal
- (6) Light-emitting part for remote control

When using remote control function in "WatchON" application, aim this part at a receiver.

- (7) Bluetooth®/Wi-Fi® antenna\*3
- (18) Out-camera

Shoot still pictures or videos.

#### 19 Light

Light when shooting still pictures and videos.

#### 20 20 mark

Hold the mark over the reader/writer when using Osaifu-Keitai®

Send or receive data via IC transmission.

- 21) S Pen
- 22 Built-in antenna part\*3
- 23 Microphone (upper)\*1

Use for calling, handsfree calling, recording stereo, and S Voice.

#### 24 Headset connection terminal

Connection terminal with 3.5 mm diameter for connecting Stereo Headset with Microphone (sample), etc.

25 GPS antenna part\*3

#### 26 Volume key/Zoom key

Adjust ringtone volume and media sound volume. Zoom in/out image while shooting a still picture and video

- 27 Back cover
- 28 microSD memory card slot
- 29 au Micro IC Card (LTE) slot
- \*1 Be careful not to cover upper microphone with your finger.
- \*2 Do not cover proximity sensor and light sensor with a protective sheet, etc. Functions may not work correctly.
- \*3 The antenna is built into the phone. Covering around the antenna by hand may affect call/communication quality.

# Attaching/removing the battery pack


Use only the battery specified for this product and attach correctly.

# **M**memo


- Before attaching/removing the battery pack and back cover, turn the power off.
- $\ensuremath{\mathbb{Q}}$  FeliCa antenna and NFC antenna are embedded in the battery pack. Handle it properly.

# Attaching the battery pack


Put your finger (fingernail) into the part 1-1 and lift the back cover in the direction of 1-2 then remove in the direction of 1-3

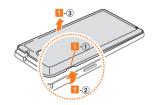

Align the terminals of the product with those of battery pack (2-1), then insert the battery pack in the direction of 2-2

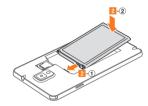

Check the orientation of the back cover to put on the main unit. Then attach by holding the entire cover

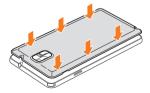

# **M**memo

- Attaching in the wrong way may damage the battery pack and cover.
- Align each tab with the groove and push along the edges not to leave spaces between the cover and the phone.

# Removing the battery pack

- Remove the back cover
- Put your finger on the battery pack using the groove of the product and lift the battery pack in the direction of the arrow to remove



# au Micro IC Card (LTE)

Your phone number etc. is recorded in the au Micro IC Card (LTF)

 The product is compliant with au Micro IC Card (LTE) only.
 You cannot use the product by inserting the au IC-Card and micro au IC-Card for au phones and smartphones instead. au Micro IC Card (LTE)

(Front side)



(Back side)






- Power off the product and remove the battery pack before attaching/removing the au Micro IC Card (LTE).
- Note the following points, otherwise handling the au Micro IC Card (LTE) may cause malfunction or damage.
  - Do not touch the IC (metal) part of the au Micro IC Card (LTE) or the IC card terminal inside the product.
  - · Insert in the correct direction.
  - Do not use force to attach or remove.
- O Do not lose the au Micro IC Card (LTE) after it has been removed.
- - Making/receiving calls
  - Sending/receiving E-mail (@ezweb.ne.jp) and SMS
  - Setting PIN code
  - Checking own number
  - Making emergency calls to 110 (Police), 119 (Fire institution), 118 (Regional Coast Guard Headquarters) and 157 (Customer Service Center)
- © Do not insert an au Nano IC Card (LTE) to which a conversion adapter is attached. Doing so might cause a fault.

# Attaching the au Micro IC Card (LTE)

- Remove the battery pack and cover
- With the IC (metal) side down, insert the au Micro IC Card (LTE) at the orientation shown all the way into the card slot

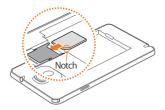

## Removing the au Micro IC Card (LTE)


- Remove the battery pack and cover
- Pull the au Micro IC Card (LTE) straight out



# Charging

When you purchase your product, the battery pack is not fully charged. Be sure to charge the battery pack before use.

• "Charging, XX%" appears under the date and time on the unlock screen when charging.

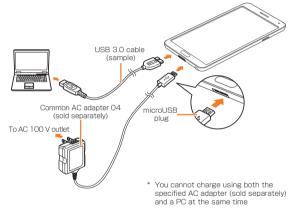

Failure to do so may cause significant damage to the product. Damage from incorrect connection is out of compensation.



The common AC Adapter 03/04 (sold separately) supports 100 to 240 VAC. Use only the common AC Adapter 03/04 (sold separately) for charging overseas.

# Charging using the AC adapter (sold separately)

The following describes how to charge the battery pack using the common AC Adapter O4 (sold separately).

It takes about 150 minutes to charge the battery pack with the common AC Adapter O4 (sold separately).

- With the engraved side up, insert the microUSB plug of the common AC Adapter 04 (sold separately) straight into the microUSB connection terminal (wider terminal on the right side) of the product
- Insert the power plug of the common AC Adapter 04 (sold separately) into the AC 100 V outlet

Start charging tone sounds and  ${\color{red}\blacksquare}$  appears on the status bar.

When charging is finished, <a> appears</a> on the status bar.

When the charging is finished, pull the microUSB plug of the common AC Adapter 04 (sold separately) straight out from the product and the power plug out from the outlet

# Charging with a PC

To charge with a PC, USB 3.0 cable (sample) is needed. Make sure the direction to connect them properly. Attempting to forcibly connect may cause a damage.

- With the engraved side up, insert the microUSB plug of the USB 3.0 cable (sample) straight into the microUSB connection terminal of the product
- Insert USB plug of the USB 3.0 cable (sample) into the USB port of a PC

appears on the status bar.
When charging is finished, appears on the status bar.

- If the found new hardware screen etc. appears on the PC, select "キャンセル (Cancel)".
- When charging is finished, remove the USB3.0 cable (sample) from the product and PC

# Turning the power on/off

# Turning the power on

Press and hold (over one second)
The unlock screen is displayed.

# ■ Initial settings and switching to English mode

The first time the product turns ON, the initial setting screen appears automatically. Follow the onscreen instructions to switch to English mode. For details, refer to the supplied "Setting Guide".

# **M**memo

# Turning the power off

- Press and hold (over one second)

  Device options screen is displayed.
- [Power off] → [OK]

# Setting the screen lock

If the screen lock is set, the screen backlight turns off to prevent the keys or touch panel from erroneous operation. If no operation is made during certain period of time, the screen of the product automatically turns off and is locked in approximately five seconds.

■ While the screen is displayed, 

Backlight turns off and screen lock activates.

Press / to turn the backlight on and display unlock screen.

# Canceling the screen lock

The unlock screen appears when the power is turned on or backlight is turned on by pressing  $|\cdot|$ .

Unlock screen → Flick (swipe) the screen up/ down/left/right to unlock the screen

# Setting up a Google account on your product

To use Google services such as Gmail and Google Play, set up a Google account on the product.

## Google account setup screen → [Existing]/ [New]

If you already have an Google account, tap [Existing] and enter Username and Password, tap [1] then follow onscreen instructions to set account.

If you do not have one, tap [New] and follow the onscreen instructions to register an account.

# Setting au ID

When you have created an au ID, you can use various au services including "au Simple Payment Service" which offers you a simple way to purchase applications from au Smart Pass and Google Play.

- In the home screen, [Apps] → [au] → [au ID Setting]
- [OK] → [au IDの設定・保存 (Set/Register au ID)]
- 3 Follow the onscreen instructions to set your au ID

If you already have an au ID, set your au ID.

# **Basic operation**

# Using the touch panel

The display on the product is a touch panel operated by touching it with your finger or S Pen.

- The touch panel is designed to be touched lightly by your finger or S Pen. Do not exert too much pressure with your finger or S Pen, or press sharp-pointed objects (fingernails, ballpoint pens, pins, etc.) against it.
- In the following cases, the touch panel may not work even if you touch it. It may also malfunction.
  - · Operation with a gloved finger
  - · Operation with your fingernails
  - · Operation with foreign objects placed on the operation pad
  - · Operation with protective sheets or stickers on the touch panel
  - · Operation when the display is wet or fogged
  - · Operation with wet or sweaty fingers

## ■ Tap/Double Tap

**■ Long Touch** 

Tap: Gently touch a screen and then immediately release your finger. Double tap: Tap the same position twice.







#### ■ Slide

While your finger is gently touching the screen, trace it to the desired direction to move over.



#### **■** Pinch

Touch the screen with two fingers and widen (pinch out) or narrow (pinch in) the fingers' distance.



## Flick (Swipe)

Operate the screen by quickly moving (flicking) your finger up, down, right, or left.



# Drag

Keep touching an item or icon, trace it to the desired direction to move.



# S Pen

Basic operations by fingers such as tapping, long touching, dragging, etc. can be also done by S Pen. Operation with pressing button on S Pen makes various functions such as saving screen, trimming screen, etc. easier to use.

- Backlight lits when S Pen is removed from the main unit during the screen is off.
- By default, Air command activates automatically when S Pen is removed from the main unit.



- (□/5) can be tapped by S Pen also.
- © Tilting S Pen extremely may cause nonrecognition of operation.
- O Depending on the terminal/application used, it may not work well.

#### **■** Direct pen input

Put S Pen close to each items on Contact, or to entry field such as address field of E-mail to show on the upper left of the entry field. Tap to input by handwriting with S Pen.



- Tap or long touch icons/items on the upper right of handwrite input field to set input language, to enter space, to delete a character, etc. (this operation is not available by finger. Use S Pen).

# ■ Select input-text after defined

Press and hold the button on S Pen, and drag S Pen right and left over the defined inputtext to select them.



# **■** Screen write

Press and hold the button on S
Pen, and long touch the screen
with S Pen to show Capture/
Edit screen. Tap v to save
currently displayed screen as
an image.

\* Screen write may be unavailable on some applications.



# ■ Trim image

Press and hold the button on S Pen, and select area of image to trim. The cropped image can be shared via E-mail, Bluetooth® function, etc.



# **■** Action Memo

Press and hold the button on S Pen, and double tap the screen to activate Action memo.



#### **■ Display Air command**

Put S Pen close to the display, and press the button on S Pen to operate the following.




- 1 Display Action Memo.
- ② Activate Scrapbooker. Draw line around the image you want to save. The selected area is adjusted automatically.
- 3 Activate Screen write.
- Activate S Finder.
- (§) Activate Pen window. Drag area to display application, and select application to be activated.
- Air command is available when, in the home screen,
- □ → [Settings] → "Controls" tab → "Air command" is □.

#### ■ Replace tip of S Pen

Tip of S Pen is replaceable. When it is scraped, replace pen tip with new one using the supplied pen tip replacement kit.

ii Firmly grab the pen tip with tweezers and pluck

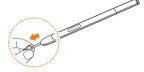

Insert new pen tip until it clicks





- O Do not let your finger caught between tweezers and pen tip.
- O Do not use old pen tip. Doing so may cause malfunction.
- O Do not put excessive force when inserting pen tip.
- $\odot$  Do not put the round side of pen tip into S Pen. Doing so may damage S Pen and the main unit.

#### **Motion**

"Motion" is a function which operates the product by set movement to use various functions such as displaying information, turning off ringtone or playing sound.

- Tap item list of motion to use, to show tutorial of each motion, to check the instruction, and/or to set application and function to use.
- \* This function maybe unavailable on some applications.

#### **■** Direct call

When detailed history list screen or detailed contact is displayed, lift up the product and put it close to your face to call the contact.



#### ■ Smart alert

If you lift up the product when missed calls or new SMS messages exist and the display backlight is turned off, the product vibrates to notify.



#### **Zoom**

When still image data screen is displayed, tilt the product back and forth with long touching two points on the screen to zoom in/out the screen.



## ■ Browse images

When an image is zoomed in, long touch the image and tilt the product up/down/right/ left to move in the image.



#### Mute/pause

While ringtone, notification ringtone, or alarm is sounding or while song or video is playing, turn over the product to mute/pause it (except for when the display backlight is turned off).



#### **S** Preview


Put finger or S Pen close to the display of the product to operate the following.

- This function maybe unavailable on some applications.
- Activate S Preview before using.
   In the home screen, □ → [Settings] → "Controls" tab → [S Preview] → Tap of "S Preview" to turn to □ and tap "S Preview pen options"/"S Preview finger options" and tap of functions to turn to □ to use.
- \* Set "S Preview mode" to "Auto S Preview" or "Finger S Preview" to set "S Preview finger options".
- Tap item list of preview to use to show tutorial of each preview.

#### ■ Information preview/Progress preview/ Speed dial preview

Display preview to show screen out of the display by putting your finger or S Pen close to text or image. You can also display time information of the scene and flame by putting your finger or S Pen close to progress bar (current playing position) during playing videos, etc. Put your finger or S Pen close to number on keypad screen to show name of set speed dial.

 Pointer color changes to blue when the pointer function of S Pen is on and there is information preview.

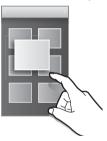

#### **■** Icon labels (by pen tip)

Put S Pen close to icon to show its description.

\* This function is not available with finger.



#### List scrolling

Put S Pen close to edge (up, down, left, right) of the screen to scroll.

\* This function is not available with finger.

#### ■ Webpage magnifier

Put your finger close to browser screen to magnify content on webpages.

\* This function is not available with S Pen.







- Keep certain distance between your finger/S Pen and the main unit while operating S Preview. Putting your finger/S Pen away form the main unit during S Preview operation disables the operation.
- When your finger/S Pen is too close to the main unit during S Preview operation, it might be recognized as touch operation.

## Using the home screen

The home screen consists of multiple screens that can be switched by flicking left or right. You can return to the home screen at any time by pressing \_\_\_\_\_.



1) Widgets

Tap to activate or operate.

② Shortcuts

Tap to activate applications or functions.

- 3 Home screen guide Indicates which screen you are in.
- 4 Application icons

Tap to activate applications or functions.

Tap "Apps" to show the applications screen.

#### Starting an application

Tap an icon displayed on the applications screen to activate an application.

 Some applications and functions require communication charge.

#### ■ Displaying the applications screen

#### In the home screen, [Apps]

Applications screen appears.

· Flicking from side to side toggles applications screen.

#### ■ Main applications

Application	Description
Phone*1	Make/Receive calls, view call logs, etc.
Contacts	Manage contacts.
SMS	Send/Receive SMS.
E-mail*1	Send/Receive E-mail (@ezweb.ne.jp).
S Note	Create memos by inputting text or handwriting.
Gallery	View still images and videos.
Camera*1	Shoot still pictures, record videos.
Music	Play music.
Video	Play video.
Scrapbook	Shows list of images, trimmed by S Pen and saved in "Scrapbook". If the image is trimmed from a web page or YouTube, link to the page/video is also saved.
Clock	Set an alarm, display clock, etc.
S Planner	Manage schedule.
MobileTV	Watch 1Seg programs.

Application	Description
ChatON	An application to use to enjoy group chat.
Maps	View current location, find another locations, calculate routes, etc.
Samsung Hub	Download videos, books, games, etc.
Samsung Apps	Download useful applications and update installer applications.
auスマートパス (au Smart Pass)	You can enjoy as many applications as you want by 390 yen per month! Also coupons, presents, photo storage and security apps are available. Enjoy your safety and comfortable smartphone life!
Play Store	Download/Purchase applications from Google Play.
YouTube	Play YouTube videos.
samsung	
Internet*1	Connect to the Internet.
Voice Recorder	Record voice.
Action Memo	Shows list of Action Memo.
Calculator	Perform basic calculations.
POLARIS Office 5	View/Edit/Create Office document.
My Files	View/Manage data of still pictures, videos, music, etc.
Mail	Use PC-mail (several accounts can be set).
Story Album	Create album and arrange images.
S Health	This application coordinates data of your body composition, blood pressure, etc. and help to manage your health.
Group Play	Share image, music, etc. via Wi-Fi®.

	Application	Description
	Samsung Link	Share and play contents in the product with other devices.
	WatchON	Use this product to operate other devices by registering infrared remote controller of other devices.
	S Voice	Operate the product via voice command.
	Downloads	View downloaded files.
Go	ogle	
	Google	Search in the product and on the web.
	Voice Search	Search via voice input.
	Gmail	Use Gmail.
	Google+	Share information and chat with other users usinig Google+.
	Messenger	Use Google+ messenger.
	Play Movies & TV	Rent movies from Google Play and play videos saved in the product.
	Play Books	Download/Purchase books from Google Play and view them from this product.
	Play Games	Enjoy games on Google Play Games!
	Hangouts	This is a communication tool to enjoy conversation using photo, smiley, video hangout, etc.
	Chrome	Connect to the Internet.
	Google Settings	Manage each setting related to Google all at once.

Application		Description
Ga	alaxy plus	
	SketchBook for Galaxy	Draw pictures with various effects using S Pen.
	Flipboard	View information such as Facebook, Twitter, YouTube in a magazine like layout.
	Dropbox	Free service which allows you to access still pictures, videos, etc. from anywhere.
	Evernote	Save various information in server, and organize and manage it easily.
	TripAdvisor	Shows information of hotels, restaurants, sightseeing places, etc.
	Dictionary	Look up words in a dictionary.
	Osaifu-Keitai	Shopping with electronic money, obtaining coupons etc. are available only by holding the product over the IC card reader/writer.
au	I	
	auお客さまサポート (au Customer Support)	You can check the subscription contents or monthly usage of your au phones etc. with this application. You can change your rate plan, apply for optional services and so on at au Customer Support website.
	au災害対策 (au Disaster Countermeasure)	This is an application in which you can use Disaster Message Board, Emergency Rapid Mail (Earthquake Early Warning and Disaster and evacuation Information and Tsunami Warning) and Disaster Voice Messaging Service.

Application	Description
au Backup App	"au Backup App" can backup and restore various data in your smartphone to SD card.
au Easy Setting	"au Easy Setting" assist you to set up au services and functions.
取扱説明書 (Instruction Manual)*2	Display operation method.
3LM	Lock the operations in case of loss of your product.
リモートサポート (Remote Support)	Call for technical supports on the phone operations by sharing the screen that you are watching with au operators.
安心アクセス (Safety Access)* <sup>2</sup>	This is a application which limit the access to the inappropriate application and web page so that your child can use a smartphone safely.
au Market	You can install Android-based applications offered with au Smart Pass service.
おはなしアシスタ ント (Ohanashi assistant)	This application lets you get weather forecasts, place phone calls, send E-mails, and set alarm etc. easily by talking. It also provides you fun conversations with the assistant character.
GLOBAL PASSPORT	Check charges and ways to use your Smartphone overseas depending on the connected network. Dialing Assist function is available for International call to Japan from overseas.

Application	Description
au Wi-Fi接続 ツール (au Wi-Fi connection tool)	Connects to a wireless LAN (Wi-Fi®) network easily in an area where au Wi-Fi SPOT is available. Also, you can set wireless LAN (Wi-Fi®) easily with a wireless LAN (Wi-Fi®) access point on which "Simple connection" is available.
BarcodeReader	ICONIT - Barcode Reader Evolving Shoot barcode with ICONIT to get something more than ever. Just scan QR code or UPC/EAN code and you will get high-quality movies, music, images on your Smartphone.
au Cloud	The application to move photos & movies of smart Phone into au Cloud either automatically or manually. Automatic movement is limited to the area covered by Wi-Fi and/or WiMax.
au テレビ.Gガイド (au TV.G-GUIDE program table)	View TV program table or search programs. Functions using 1 Seg or remote timer recording can be used.
LISMO	With LISMO application, you can enjoy music, find hot music information, try and purchase songs.
Uta Pass	Streaming music channel service that enables you to listen to varieties of preset channels and you can also listen with your friends.
Video Pass	Enjoy popular movies and dramas, animation.
ブックパス (Book Pass)	Enjoy many e-books such as comics, novels and photo albums.
Facebook	Access Facebook.

Application	Description
Friends Note*2	"Friends Note" can manage Native Address Book of your phone and multiple social networking services in just one application.
GREEマーケット (GREE market)* <sup>2</sup>	This application allows you to browse games and other content provided by GREE. You do not need a GREE account in order to use this application.
GREE*2	This is an official application from GREE, a free social mobile gaming network with more than 25 million users.
NFC Menu	Show list of application compatible with NFC service, and make setting of NFC lock and others.
NFC TagReader	Read/Write data of NFC tag with this application. It operates along the information after reading data.
auショッピン グモール (au shopping mall)	Official application for au Shopping Mall where you can enjoy shopping on the Internet for smartphone goods, foodies, fashion, etc.
ゲームギフト (Game gift)*2	This is a very new game media service which provides "gifts" such as free items of popular games, latest game information, strategy guide, and review collections.
KKBOX*2	Music subscription service which enables you to listen together with friends.
lululolo-Picture Book- <au home<br="">Arrange&gt;*2</au>	au Home Arrange is the launcher Apps for Dress up your Smart Phone. The member of "au smart pass" can select theme that be introduced every month on the portal site.

Application	Description
ナビウォーク (Navi for walkers)*2	Helps you navigate route combining public transportation and walk.
LINE*2	LINE is a new communication app which allows you to make free voice calls and send free messages whenever and wherever you are, 24 hours a day.
じぶん銀行 (JIBUN BANK)*2	You can check the statement of your account balance, search for nearest available ATMs, and so on through the screen optimized for Smartphones.
TOLOT フォト ブック (TOLOT Photo book)* <sup>2</sup>	The application for make a beautiful photo book easily! A photo book is a good way for save your precious tour or anniversary, or give your friends or family as a present, just by using the photos were taken by your smartphone!
LAWSON*2	Welcome to Lawson's All-New mobile app. Check for latest information and deals! By logging in, loyalty program "Ponta" members will have FREE access to "Lawson Wi-Fi," our instore Wi-Fi service. Members can get exclusive limited coupons and check point balance.
au ID Setting	Set an au ID.
Settings	Make various settings for the product.

<sup>\*1</sup> When you purchase the product, it is located at the bottom of the home screen.
\*2 Shortcut apps easily to download/update. Downloading/Installing is required for

## Monitoring the product's status

Icons indicating the status of the product appear in the status bar at the top of the screen. At the left of the status bar, notification icons indicating missed calls, new mail, running actions, etc. and at the right of the status bar, status icons indicating the status of the product appear respectively.



## Understanding icons

#### ■ Main notification icons

Icon	Overview
C	Call is received
<b>*</b>	Dialing/Calling in the background
×	Missed call
M	New Gmail message
<b>≻</b> 6	New PC-mail message
E	New E-mail (@ezweb.ne.jp) message
B/R	Authorizing E-mail (sending, sending complete/receiving)
油	Failure in E-mail authorization/failure in receiving/ new mail messages in the server
EA	Failure in sending/receiving E-mail (@ezweb.ne.jp)
SMS	New SMS/Message notifications of the voice mail service, incoming notifications of the incoming notification service
Φ	Hangouts notifications
ag.	Answer memo function on

<sup>\*2</sup> Shortcut apps easily to download/update. Downloading/Installing is required for using.

Icon	Overview
<u>a6</u>	Recorded message of Answer memo
<u>+</u>	Downloading data/Data downloaded
<u>†</u>	Uploading data/Data uploaded
Image: Control of the	Alarm is sounding
1	S Planner notification
<b>&gt;</b> / <b>II</b>	Playing/Pausing music in the background
ő	microSD memory card in preparation
relati	microSD memory card is unmounted.
ψ	USB connecting
A	Error messages
Ê	Google Play update notification for installed applications
<b>₽</b>	Application installed
<b>□</b>	Software update setting/Set Software update
*	Wi-Fi is turned on and Wi-Fi® open network is available
Q.	Downloading data through Samsung Link completed
•	GPS positioning in process (animating)/ Positioning complete (stop animating)
Ġ.	"Nearby devices" turned on
A	Navigation activated
<b>9</b>	VPN connecting
Ψ	USB tethering turned on
ş	Portable Wi-Fi hotspot turned on
0	Both USB tethering and Portable Wi-Fi spot
	turned on
<b>•</b>	Playing music with LISMO
m	TV (1Seg) activated
<b>₹</b> •	Emergency Rapid Mail
	Charged

Icon	Overview
	Screen shot is taken.
<u>1335</u> 2	Keyboard is shown.
Œ	Hidden notifications
	au Micro IC Card (LTE) not inserted
$\Theta$	Blocking mode set
	S Pen removed
⊕	Handsfree mode set

<sup>\*1</sup> Status bar and icons are shown in green.

## ■ Main status icons

Icon	Overview
_a1 / Ø	Signal strength  Melevel 4/ oout of range
<b>A</b> d	Signal strength (international roaming)
LIE / LIE	LTE data communication status  The status are the s
3G / 3G 4†	3G data communication status  ■ 3G data communication available/ ■ 3G data communication in process
1X / 1X ##	1X data communication status  CDMA 1X data communication available/ CDMA 1X in process
<u></u> / <del>•</del>	Wireless LAN (Wi-Fi®) communication status  Wireless LAN (Wi-Fi®) available/ Wireless LAN (Wi-Fi®) communication in process
*	Bluetooth® function turned on
*	Connecting with a Bluetooth® device
<u> </u>	Wi-Fi Direct turned on/connecting
×	Airplane mode activated
<b> ≥ </b>	Silent mode (Vibrate) set
×	Silent mode (Mute) set

Icon	Overview	
<b>6</b> 30	During a hands-free call (Speaker)	
<u>*</u>	During a call with Mute (mute your voice)	
/ 3	Battery level 100 % / 1 Charging	
Image: Control of the	Alarm set	
NEG G	NFC/Osaifu-Keitai lock set	
<b>\$</b> / <b>&amp;</b>	S Gesture available	
Ø	Smart screen function turned on	

## Notification panel

When a notification icon appears, you can open the Notification panel to check overview of the notification. Tap icon on the Notification panel to set functions or check the information notified.

#### II Slide down the status bar



- ① Tap to show setting screen for date and time. Switch on/off of each function (Quick Settings Button).
- ② Drag from side to side, tap 
   etc. to show hidden icons.
   Long touch to show setting menu screen for each
   function.

function.
Wi-Fi: Turn on/off of wireless LAN (Wi-Fi®) function
GPS: Turn on/off of GPS function
Sound/Vibration/Silent: Switch silent mode setting
Screen rotation: Turn on/off auto-screen rotation
Bluetooth: Turn on/off Bluetooth® function
Reading mode: Turn on/off reading mode function
Mobile data: Turn on/off data communication
Blocking mode: Turn on/off blocking mode
Power saving: Turn on/off power saving mode

- 3 Set screen brightness
- 4 Show ongoing process/running process
- (§) Show notification information such as missed calls and incoming mail. Flick from side to side to delete them

Multi window: Enable/disable multi window function

- (6) Network operator currently connected is shown.
- 7 Show Settings menu
- (8) Clear notification information
- Slide up to close the Notification panel

## **Character input**

Use the software keyboard to enter characters. To display the software keyboard, tap a character input box in the character entry screen for adding contacts, creating a message, etc.

Samsung Japanese keypad is set by default.

"Google voice typing" function is also available to input character.

#### Switching the keyboard

While the keyboard is displayed, slide down the status bar

Notification panel is displayed.

[2] [Select input method] → Select input method you want to use

# Entering text with Samsung Japanese keypad

For Samsung Japanese keypad, you can use two types of keypads: "QWERTY" and "3x4 key".

- Switching the keypads
- 🚺 While the keypad is displayed, [ 🌣 ]
- [3x4 Keyboard⇔QWERTY Keyboard]
- [3x4 Keyboard]/[QWERTY Keyboard] → [OK]

#### **Phone**

#### Making calls

- In the home screen, [Phone] → "Keypad" tab
- 2 Enter the phone number of the other party
  To call a landline phone, first input the city code, even if you are in that city.
  - If you input wrong number, tap to delete the number you input.
  - Long touch 
    to delete the all the numbers you input.
- 3 (
- When you have finished the call, tap [End call]
  You can adjust the volume (loudness of the other party)
  during a call by pressing 1.

#### Using history to make a call

On the logs, history of outgoing calls, incoming calls, missed calls, rejected calls can be checked.

- In the home screen, [Phone]
  - → "Logs" tab

The Logs screen is displayed.

- : Incoming calls
- : Outgoing calls
- 💢 : Missed calls
- O: Reject calls
- 🖎: Calls from caller on the reject list
- 2 Select a party you want to call Detailed log screen appears.
- 3 [ 📞 ]




 $\ \ \, \ \ \,$  Alternatively, tap the "Contacts" tab or "Favorites" tab to call a stored number.

# Calling overseas from au phones (au International Call Service)

You can make international calls without any special procedure from your product.

Example: To call "212-123-XXXX" in America from your product

Access code varies depending on the country you call to.

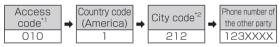

- \*1 Long touching "0" inputs a "+" and "010" is added automatically when you make the call.
- \*2 If the city code begins with "0", omit the "0" (however, some landlines, such as in Italy and Moscow, are different).

#### ■ Emergency call location notification

This product supports "Emergency call location notification" so that if you make an emergency call to the police, fire station or Regional Coast Guard Headquarters, your current location (GPS information) will be transmitted to the agency receiving the emergency call.



- O In this section, the police (110), fire station (119) and Regional Coast Guard Headquarters (118) are collectively referred to as the emergency call receiving agency.
- This feature may not yet be available at some emergency call receiving agencies.
- If you add '184' before the emergency call number 110/119/118, the emergency call receiving agency will not be notified of your location and phone number.
- In places where signal reception from GPS satellites or a base station is relatively poor, such as in an underground mall, inside a building or behind a tall building, the emergency call receiving agency may be notified of some other place different from your actual location.
- When GPS cannot be used to notify of your location, base station signal is used instead.
- When making an emergency call to the police, fire station or Regional Coast Guard Headquarters, always confirm where you are, and tell them your exact location on the phone. Note that depending on the area where you are calling, your call may not be connected to the agency having jurisdiction over that area.
- If the emergency call receiving agency determines that human lives and health are in danger, they will be able to acquire the caller's location information during the call or within a certain period of time after the call.

## Receiving calls

- You have an incoming call
- Drag or slide out of the circle
   To decline a call, drag or slide out of the circle.

## Checking your phone number

In the home screen, ☐ → [Settings] →
"General" tab → [About device] → [Status]
Your phone number is shown in the "My phone number" field.

#### Mail

You can use the following types of mail on the product.

- · E-mail (@ezweb.ne.jp)
- ·SMS
- · PC-mail
- · Gmail

#### **Using E-mail**

This service allows you to exchange E-mail (@ezweb.ne.jp) with cell phones and PCs corresponding E-mail. You can send text, photos, and video data.

- To use E-mail, set up E-mail address in advance. Follow the onscreen instructions to set up when you activate E-mail application for the first time. For details, refer to the supplied "Setting Guide".
- To use E-mail functions, subscription to LTE NET is necessary. If you did not subscribe at the time of purchase, contact an au shop or Customer Service Center.

## **M**memo

- Sending/receiving E-mail is available via wireless LAN (Wi-Fi<sup>®</sup>) but initial setting requires LTE/3G data communication.
- O You can use E-mail overseas also.
- The cost of transmitting packets varies depending on the volume of the data when sending or receiving E-mail. The transmission cost may be expensive when using the service overseas. For details, refer to the au catalog and the au homepage.
- Sending and receiving E-mail may take some time depending on if there is an attachment and the status of the connectivity in the service area.

## Creating and sending E-mail

- In the home screen, [E-mail] → [Compose]

  Address entry screen appears.
- 2 [ ] Alternatively, tap "Enter address" to directly enter an address.
- 3 Select quoting option
- [Compose]
  Message thread screen appears.
- 5 Tap subject entry field → Enter subject
- Tap the message field → Enter message text
- [ ] → [Send]



O Decoration anime is not supported.

#### Receiving E-mail

- Receive E-mail
  - 🖪 appears in the status bar.
- In the home screen, [E-mail]
  Thread list of E-mail screen appears.
- Tap thread to check

The contents of the E-mail are displayed.

#### Changing address

- In the home screen, [E-mail] → □ → [E-mail settings]
- [2] [Other settings] → [接続する (Connect)]
- [Eメールアドレスの変更 (Change E-mail address)]
   → Tap password entry field → Enter a password (4 digits) → [送信 (Send)]
- 4 [承諾する (Agree)]
- Tap E-mail address entry field → Enter the part of the address preceding "@"
   → [送信 (Send)] → [OK]

## **Using SMS**

SMS is a service that uses phone numbers as addresses to exchange messages between cell phones.

## Creating and sending an SMS

You can send a message (text of mail) using kanji, hiragana, katakana, alphanumerics, symbols, smileys, and emoticons.

- In the home screen, [Apps] → [SMS]
  Thread list by other party appears.
- 2 [=] SMS creating screen appears.
- [3] [Input Phone No.] → Enter other party's phone number

Alternatively, [3] → Select other party from Contacts.

- [Input text] → Input text
  You can send up to 160 single-byte or 70 double-byte characters in a message.
- [Send]

Long touch the sent message  $\rightarrow$  [Result Delivery Report] to check transmission result.

#### Receiving SMS

- Receive SMS
  - sappears in the status bar.
- In the home screen, [Apps] → [SMS]
  - appears on the thread which includes unread SMS.
- Tap the thread to check

Message thread screen including received SMS appears.



- O There is no charge for receiving SMS.
- Openeding on their content, some SMS may not be displayed correctly.

#### **Using PC-mail**

Using "Mail" application, you can exchange mails on this product by setting the same mail account as used on your PC.

 You need to set up a PC-mail account beforehand to use PC-mail. Follow the onscreen instructions to set account before using.

## **Using Gmail**

Gmail is a mail service provided by Google. You can check, send and receive Gmail from the product.

 You need to set up a Google account beforehand to use Gmail.

## Creating and sending Gmail

- In the home screen, [Apps] → [Google] → [Gmail]
- 2 [=]
- [To] → Input the other party's mail address
- [Subject] → Input the subject
- [Compose email] → Input a message
- **6** [ ≥ ]

#### Receiving Gmail

- In the home screen, [Apps] → [Google] → [Gmail]
- Tap received Gmail

#### Internet

You can connect to the Internet using packet communication or wireless LAN (Wi-Fi®) function.

#### Using a browser

You can use a browser to view web pages just as you can on a computer.

## Displaying a web page

- In the home screen, [Internet]
  Browser screen appears.
- Tap address bar at the top of the screen → [X] Search or enter Web address field appears.
- Enter URL or keyword to be searched Keyword suggestions are listed under Search or enter Web address field.
- Select an item from the keyword suggestion/ [Go] on the keyboard



○ Tap to enter a keyword for voice search.

#### Using bookmarks/history

You can check history or save bookmarks.

- Browser screen → [X] on the address bar
  → "Bookmarks"/"History" tab
- Tap bookmark/history to open
- **Storing Bookmarks**
- Browser screen → [X] on the address bar → "Bookmarks" tab
- [Add bookmark]
- Check/Edit title
  - To change folder to save the bookmark, tap "My device" field → Select a folder to save.
- [Save]

## **Applications**

#### **Using Contacts**

You can see the contacts information on the contacts list screen of Contacts. You can also add pictures to contacts.

## **M**memo

Phone numbers and names saved in the contact may be lost due to an accident or malfunction. It is recommended that you take a copy of important phone numbers etc. We shall not be liable for the damage and lost profit in the case that the contact is changed or lost because of an accident or malfunction.

#### Registering a contact

- In the home screen, [Apps] → [Contacts]
- 2 (+)

When you register contacts for the first time, saving location selection screen appears.

- Enter name
- Input the required items
- [Save]

## Registering your profile

- Contact screen → [Set up profile]
  Profile screen appears.
- Enter required items → [Save]

## Editing contacts

- Contact screen → Tap a contact you want to edit
- 2 [🖈]

· To delete the contact, □ → [Delete].

#### Shooting with the camera

You can shoot still pictures or record videos using the "Camera" application. Shooting/Recording is available in horizontal or vertical screen by tilting the product.

#### Before using the camera

- Fingerprints or grease on the lens make it impossible to capture clear pictures or movies. Wipe the lens clean with a soft cloth before shooting.
- When shooting, take care not to cover the lens with your finger or hair.
- When recording a movie, take care not to cover the microphone with your finger. Quality of audio recorded via the microphone may deteriorate depending on the loudness of speech or the surrounding environment at the time of recording.

- Placing the product on an unstable surface when performing Self Timer shooting can cause it to fall when a vibrator operation or other operation is triggered by an incoming call, etc.
- The focus-lock sound and shutter sound when taking still pictures, and the record start sound and record end sound when recording videos are always produced even in silent mode.


#### Understanding the shooting screen

The horizontal screen view is used for explanation purpose.

#### In the home screen → [Camera]

lcons in the default state are shown.

 When confirmation screen for Storage location appears, confirm the content and tap "Cancel"/"OK".

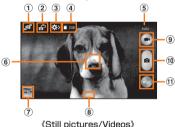

- 1) Switch to toggle in/out-camera
- ② Dual camera

Shoot sill pictures or videos using both in- and outcamera.

Sounds are recorded via microphone for video recording.

#### 3 Quick settings

Tap to show the following icons.

: Shows settings menu for Camera.

**5**<sub>∅</sub> : Toggles flash to Off/On/Auto.

: Turn off/on Smart stabilization.

: Turn off/on Voice control.

: Set recording mode for video.

🚅 : Set Share shot.

Storage location (microSD memory card)
 Indicate that the microSD memory card is set as storage location

- **5** Current mode
- 6 Focus
- 7 Preview image

Thumbnail of still images/videos shot right before appears. Tap to open preview screen.

- 8 Effects
- Shutter (for videos)
- 10 Shutter (for still pictures)
- 11) Shooting mode menu

## Shooting still pictures

- In the home screen, [Camera]
- Point the camera at the subject
  - Press (Volume key) to adjust zoom (x1.0 up to approximately x4.0). However, depending on shooting mode, zoom may be unavailable.
  - · Tap the screen to move a point to focus on.
- 3 [ 📵 ]

The shutter sounds and the taken still picture is saved.

#### Shooting video

- In the home screen, [Apps] → [Camera]
- Point the camera at the subject → []

Start sound is emitted and recording starts.

- Press (Volume key) to zoom (x1.0 up to approximately x4.0). However, depending on shooting mode, zoom may be unavailable.
- Tap to pause recording.
- To stop shooting, [

Stop sound is emitted and recorded video is automatically saved.



- - tab(still picture settings)
     Photo size, Burst shot, Tap to take pics, Face detection, Metering, ISO, Smart stabilization, Save as
  - "ab (video settings)
    - Video size, Video stabilization, Audio zoom
  - \* tab (common settings)
     Location tag, Review, Volume key, Timer, White balance,
     Exposure value, Guidelines, Flash, Voice control, Contextual filename, Save as flipped, Storage, Reset

## Gallery

You can view still pictures and videos saved on the product or microSD memory card and sort them. Supported file formats are as follows (some files cannot be played);

Still picture	JPEG, PNG, GIF, AGIF, BMP, WBMP
Video	MP4, M4V, 3GP, 3G2, WMV, ASF, AVI, FLV, MKV, WEBM, TS



- This product is not compatible with DivX. Download compatible application to play files in DivX format.
- In the home screen, [Apps] → [Gallery]
  Folder list appears.
- **Tap an album**Data list screen appears.

#### Viewing a still picture or video

- In the home screen, [Apps] → [Gallery] →
  Tap a still picture or video you want to view
  - Tap the screen while a still picture/video is displayed to display operation icons or menu items which allow you to send data, upload data to online service, delete data, etc.

#### au災害対策 (au Disaster Countermeasure)

au災害対策 (au Disaster Countermeasure) is an application in which you can use Disaster Message Board, Emergency Rapid Mail (Earthquake Early Warning and Disaster and evacuation Information and Tsunami Warning) and Disaster Voice Messaging Service.

In the home screen, [Apps] → [au] → [au災害対策 (au Disaster Countermeasure)]

au災害対策 (au Disaster Countermeasure) screen appears.

## Using Disaster Message Board

Disaster Message Board service enables you to register information of well-being from an area of distress via LTE NET in case of large-scale disaster such as earthquake with a seismic intensity of over 6 lower. Registered information can be viewed on any cell phones and PCs besides by au cell phone users.

For details, refer to "Disaster Message Board" of au homepage.

■ au災害対策 (au Disaster Countermeasure) menu → [災害用伝言板 (Disaster Message Board)]

Follow the onscreen instructions to register/confirm.

## memo

- To register information of well-being, E-mail address (ezweb. ne.jp) is required. Set up E-mail address beforehand. For details on E-mail address setup, refer to "Setting Guide" available on au homepage.
- © Clearing and changing setting of 安否お知らせメール (safety notification mail) is unavailable while Wireless LAN (Wi-Fi®) is connected.
- The Company makes no guarantees about the service quality. The Company assumes no responsibility whatsoever for any damages suffered by customers resulting from failure in registering information of well-being due to the number of accesses or equipment failure, damage or loss of information of well-being, or registered information of well-being.

## Using Emergency Rapid Mail

Emergency Rapid Mail is a service that distributes
Earthquake Early Warning or Tsunami Warning delivered
from the meteorological bureau or Disaster and evacuation
Information delivered from the government or local public
organization to all au cell phones in specified areas
simultaneously.

- \* When you purchased the product. "受信設定 (Reception setting)" of Emergency Rapid Mail (Earthquake Early Warning and Disaster and evacuation Information) is set to "受信する (Receive)". Reception setting of Tsunami Warning is available in the settings of Disaster and evacuation Information. When you receive Earthquake Early Warning, ensure your safety and take proper action according to the situation around you. When you receive Tsunami Warning, draw away from sea coast immediately and evacuate to safe place such as upland or well-built high building.
- au災害対策 (au Disaster Countermeasure) menu
  → [緊急速報メール (Emergency Rapid Mail)]

Inbox appears. Select a mail you want to view to check the detail.

削除(Delete)		Delete received mail.
設定 (Settings)	受信設定 (Reception setting)	緊急地震速報 (Earthquake Early Warning): Set whether to receive Earthquake Early Warning. 災害・避難情報 (Disaster and evacuation Information): Set whether to receive Disaster and evacuation Information and Tsunami Warning.
	通知設定 (Notification setting)	音量 (Volume): Set volume of ringtone. バイブ (Vibration): Set whether to vibrate when receiving emergency information. マナー時の鳴動 (Action in silent mode): Set whether to notify according to the silent mode setting in silent mode.
	受信音/ バイブ確認 (Ringtone/ vibration confirmation)	緊急地震速報 (Earthquake Early Warning): Check the ring tone and vibrator settings for Earthquake Early Warning. 災害・避難情報 (Disaster and evacuation Information): Check the ring tone and vibrator settings for Disaster and evacuation Information and Tsunami Warning.



- Reception of Emergency Rapid Mail is notified by a special warning tone. It is not possible to change the warning tone.
- © Earthquake Early Warning are sent to areas where strong quakes (over 4 degrees) are expected when the expected maximum seismic intensity is higher than lower 5.
- The Earthquake Early Warning system provides advance announcement of the estimated seismic intensities and expected arrival time of principal motion. These estimations are based on prompt analysis of the focus and magnitude of the earthquake using wave form data observed by seismographs near the epicenter.
- © Earthquake Early Warning may not arrive before strong tremors in arrears near the epicenter.
- Tsunami Warning are a notification delivered from the meteorological bureau (major tidal wave, seismic sea wave) to the area including target coast.
- Disaster and evacuation Information is a service that distributes bulletins concerning residents' safety including evacuation advisories, evacuation orders and other warnings issued by the national and local governments.
- O The service is available only in Japan (it cannot be used overseas).
- No information fee or communication charge is required for receiving Emergency Rapid Mail.
- The Company is not liable for damages suffered by customers resulting from the service's information, lack or delay in the information caused by transmission or system breakdowns, or other events that are outside the responsibility of the Company.
- Refer to the Japan Meteorological Agency web page for details about distribution of Earthquake Early Warning or Tsunami Warning. http://www.ima.go.ip/
- You cannot receive Emergency Rapid Mail when your cell phone is turned off or during a call.
- © Emergency Rapid Mail may not be received when your cell phone is communicating such as while sending/receiving SMS/mail or using the browser, or if you are in a place where signal does not reach even in the service area (e.g. in a tunnel, basement) or in a place with a poor reception.

- You cannot receive Emergency Rapid Mail that the reception is
   failed.
- This delivery system is different from Earthquake Early Warning provided through TV, radio, or other communication procedures, which means that the time the Earthquake Early Warning arrive may vary.
- $\ensuremath{\mathbb{Q}}$  Information from some place other than your current location may be received.

#### Using Disaster Voice Messaging Service

Disaster Voice Messaging Service is a service which allows you to record your voice and send someone you want to inform your well-being in case of a large-scale disaster.

au災害対策 (au Disaster Countermeasure) menu → [災害用音声お届けサービス (Disaster Voice Messaging Service)]

#### ■ Sending voice

Select "声をお届け (Send voice)" and "①お届け先を選択 (Select a send destination)" $^{*1} \rightarrow "$ ②お届けしたい声を録音 (Record your voice)".

\*1 You can select sending destination from Contacts.

#### ■ Receiving voice

Reception of voice message is notified pop-up screen or SMS. Receive (download) the voice message to play.

- \* If the recipient's device is a smartphone that has not launched 'au災害対策 (au Disaster Countermeasure)' application supporting Disaster Voice Messaging Service or au cell phone, notifications are sent by SMS.
- Notifications made by SMS are not saved to au Disaster Countermeasure application.

## **Memo**

- To use via Wi-Fi, initial setting via LTE/3G network is required.
- O Voice message can be recorded for up to 30 seconds.
- Messages can be sent and received to or from au cell phones, NTT DOCOMO and SOFTBANK cell phones.
- O Voice message may be difficult to hear if the media volume is low or silent mode is set.
- Ovoice messages cannot be saved or played if the device memory does not have available space.
- Some cell phones do not support receiving voice messages. For details, refer to au homepage.

# Using Disaster Information/Website for Donation

Check history of disaster or evacuation information delivered from local municipalities, disaster information portal sites and websites for donation.

au災害対策 (au Disaster Countermeasure) menu → [災害情報/義援金サイト (Disaster Information/Website for Donation)]

Select item to check.

#### File management

#### Using a microSD memory card

You can save/move/copy data onto a microSD memory card (including microSDHC memory card, microSDXC memory card) inserted to the product.

 Do not turn off the product or subject it to impact while microSD memory card data is being accessed. Doing so may cause data corruption.



Some applications require a microSD memory card, use the product with the microSD memory card attached.


# Attaching/removing a microSD memory card

Before attaching/removing microSD memory card, make sure to turn the product off and remove the battery pack.

- Attaching/removing microSD memory card is possible with the product turned on. In such case, be careful not to remove the battery. When removing microSD card, be sure to unmount microSD card first.
- · Do not force to attach or remove.

#### Attaching a microSD memory card

- Remove the back cover and battery pack
- With the contact (metal) side of the microSD memory card down, insert the microSD memory card in the direction shown all the way straight into the microSD memory card slot
  - microSD memory card slot is placed above au Micro IC Card (LTE) slot.

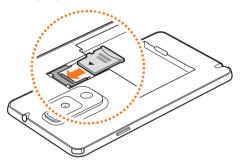




Make sure that the top and bottom of the microSD memory card are facing correctly. Trying to force a wrongly oriented card into the slot could make it impossible to remove the card and result in damage.

#### Removing a microSD memory card

- Remove back cover and battery pack
- 2 Pull the microSD memory card straight out

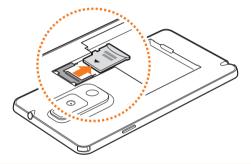



If you try to remove the microSD memory card before unmouting, it may cause malfunction or data loss.

## Formatting a microSD memory card

Formatting a microSD memory card erases all of the data currently stored on it.

- In the home screen, □ → [Settings] → "General" tab → [Storage]
- [ [Format SD card]
- [3 [Format SD card] → [Delete all]
  When unlock screen appears, authenticate and tap "Delete all".

## **Using Samsung Kies**

You can synchronize data such as contacts, music, still pictures, videos with the product or update software of the product using Samsung Kies.

- Download Samsung Kies from the Samsung web site and install to your PC. For details, visit the web site.
- Activate Samsung Kies on a PC
- Connect the product and the PC with USB 3.0 cable (sample)

#### **Data communication**

## Using the wireless LAN (Wi-Fi®) function

You can connect to the Internet via home wireless LAN (Wi-Fi<sup>®</sup>) environment or public wireless LAN environment outside.





© For home wireless LAN (Wi-Fi®) environment, internet connection and wireless LAN unit (Wi-Fi® network) are required.

## Connecting Wi-Fi® network

- In the home screen, □ → [Settings]
  → "Connections" tab
- [2] [Wi-Fi] → Tap to turn to Wi-Fi setting screen appears and available Wi-Fi® networks are listed

#### Tap a Wi-Fi<sup>®</sup> network → [Connect]

- If you select a Wi-Fi<sup>®</sup> network protected by security, enter a password (security key)\* and tap "Connect".
  - \* The password (security key) is set for an access point. Contact the network administrator for details.
- To disconnect from a Wi-Fi® network, tap the Wi-Fi® network you are connected to → Tap [Forget].

#### **//**memo

- Packet communications can be done while the Wi-Fi<sup>®</sup> function is on. However, the Wi-Fi<sup>®</sup> function has priority while connected to a Wi-Fi<sup>®</sup> network.
  - If the Wi-Fi® network is cut off, connection automatically switches packet communication.

# -unction settings

## **Function settings**

From Settings, set up and manage functions. You can personalize the wallpaper or ringtone, set up security, initialize data, etc.

#### Displaying the Setting menu

- In the home screen, □ → [Settings]
- Tap "Connections"/"Device"/"Controls"/ "General" tab

#### ■ Tab List

Tabs	Outline	
"Connections" tab	Make settings for "Network connections" and "Connect and share".	
"Device" tab	Make settings for "Sound & display" and "Personalization".	
"Controls" tab	Make settings for "Voice and input methods" and "Motion control".	
"General" tab	Make settings for "Accounts and backup" and "Device manager".	

## Setting the Airplane mode

When airplane mode is set, wireless functions are disabled (telephone, packet transmission, Wi-Fi® and Bluetooth® functions).

- In the home screen, □ → [Settings] → "Connections" tab
- Mark "Airplane mode " → [OK]
  - Unmark "Airplane mode" to turn it off.
     You can enable wireless LAN (Wi-Fi<sup>®</sup>) and Bluetooth<sup>®</sup> function even when Airplane mode is ON. Do not use wireless LAN (Wi-Fi<sup>®</sup>) function in a place where the use of radio wayes is prohibited such as in airplane or hospital.



 $\ \ \,$  Alternatively, press and hold  $\ \ \,$  for over one second, tap [Airplane mode]  $\rightarrow$  [OK] to turn it on and off.

## Setting the Silent mode

- [] (Press and hold for over one second)
- [Vibrate]/[Mute]

#### Screen lock authentication

You can set screen lock authentication to secure your product and prevent unauthorized access.

- In the home screen, 
  □ → [Settings] →
  "Device" tab
- [Lock screen] → [Screen lock]
- [Swipe]/[Face unlock]/[Signature]/[Pattern]/
  [PIN]/[Password]

To cancel screen lock setting, tap [None].

4 Set required items

## Overseas usage

#### For overseas use without anxiety

The overseas network condition is available on the au homepage. Make sure to check the condition before leaving Japan.

http://www.au.kddi.com/information/notice\_mobile/global/

#### ■ When the product is stolen or lost

- If the product is lost or stolen while in overseas, please contact the Company immediately to suspend phone service. Please be aware that any calling charges and packet communication charges incurred after theft or loss of a phone are the responsibility of the customer.
- If the au Micro IC Card (LTE) inserted into the product is stolen or lost, the card may be inserted into another mobile phone (including GSM mobile phone for overseas use) by a third party. So, it is recommended to set the PIN code to protect from improper use by a third party.

#### Using the product properly by knowing about calling and communication services overseas

- · Calling charges differ depending on the country/region.
- Domestic discount services do not apply to calling charges incurred while overseas.
- Calling charges are also incurred when receiving calls overseas.
- Depending on the country/region, calling charges may be incurred from the time that you tap " " "."

## Configuring the overseas settings

# Obtaining the PRL (Roaming Area Information)

The PRL (roaming area information) contains information on roaming areas of overseas partner providers who have signed an international roaming contract with KDDI (au).

Please obtain the latest PRL before traveling.

- In the home screen, ☐ → [Settings]
  → "Connections" tab → [More networks]
- [Mobile networks] → [Roaming settings] → [PRL Settings] → [Update PRL version]

Listen voice prompt played after connected, then hang up the phone. After the phone is hung up, updating PRL starts. It may take approximately ten minutes to update.

## memo

- © Call charge or communication charge does not apply for updating PRL.
- © Be aware that service may be unavailable in some area/country if you do not update the PRL.

## Network mode settings

Set network mode where the product is used.

- In the home screen, □ → [Settings]
  → "Connections" tab → [More networks]
- [Mobile networks] → [Roaming settings]
  → [System setting]
- Japan Use in Japan.

  LTE Roaming Set when using LTE/UMTS/GSM network overseas.

  Set when using UMTS/GSM network overseas.

## Making a call at your travel destination

Making a call to another country (including Japan) from your travel destination

You can make a call to Japan or another country from your travel destination.

- In the home screen, [Phone]
- Input + (long touch "0"), country code, area code (city code), other party's phone number
- 3 [ ( ]

## **Appendix**

#### Introduction of related accessories

- Battery Pack (SCL22UAA)
- Common DC adapter O3 (O301PEA) (sold separately)
- S Pen (SCL22KKA/SCL22KWA)
- Portable charger 02 (0301PFA) (sold separately)
- microUSB cable 01 (0301HVA) (sold separately) microUSB cable 01 Navy (0301HBA) (sold separately) microUSB cable 01 Green (0301HGA) (sold separately) microUSB cable 01 Pink (0301HPA) (sold separately) microUSB cable 01 Blue (0301HLA) (sold separately)
- AC Adapter JUPITRIS (White) (L02P001W) (sold separately)

AC Adapter JUPITRIS (Red) (L02P001R) (sold separately)

AC Adapter JUPITRIS (Blue) (L02P001L) (sold separately)

AC Adapter JUPITRIS (Pink) (L02P001P) (sold separately)

AC Adapter JUPITRIS (Champagne) (L02P001N) (sold separately)

Common AC Adapter O3 (O301PQA) (sold separately) Common AC Adapter O3 Navy (O301PBA) (sold separately)

Common AC Adapter 03 Green (0301PGA) (sold separately)

Common AC Adapter 03 Pink (0301PPA) (sold separately)

- Common AC Adapter 03 Blue (0301PLA) (sold separately)
- Common AC Adapter 04 (0401PWA) (sold separately)
- au Carrying Case G Black (O106FCA) (sold separately)

## **M**memo


- © For the latest information on accessories, visit the au homepage (http://www.au.kddi.com/) or contact the Customer Service Center.
- $\ensuremath{\mathbb{Q}}$  Accessories described on this page can be purchased from the au Online Shop.

http://auonlineshop.kddi.com/

# Using Stereo Headset with Microphone (sample)

Connect the connection plug of the Stereo Headset with Microphone (sample) to the headset connection terminal of the product

Make sure the direction and connect them properly. Attempting to forcibly connect may cause a damage.

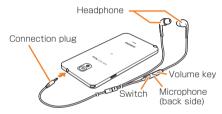

#### **Troubleshooting**

Before you assume that the product is malfunctioning, check the following:

Symptom	What you should check
Cannot turn on power.	Is the battery pack charged? Is the battery pack attached properly? Is [] pressed and held for over one second?
Cannot charge the battery.	Is the battery pack attached properly? Is the specified AC adapter (sold separately) surely plugged into an outlet?
Battery usage time is short.	Do you often use the product in places where one (out of service area) is displayed?

Symptom	What you should check
Cannot operate touch panel as intended.	Are you operating with gloved hands?  Are you operating with a fingernail or foreign object on the screen?
Cannot operate key/ touch panel.	Is screen lock set? Is the power turned on? • Turn off the power and then turn it on again.
Screen response is slow when you tap on the screen/press the keys.	Screen response may slow down when a large amount of data is stored in the product or being transmitted between the product and a microSD memory card.
au IC-card (UIM) error is displayed.	Is au Micro IC Card (LTE) inserted?
Cannot make calls.	Is au Micro IC Card (LTE) inserted?  Did you enter the correct phone number? (Did you enter the phone number starting with the area code?)  Is "Airplane mode" set?  Did you set the correct network mode?
Cannot receive calls.	Is reception good enough? Are you out of the service area? Is "Airplane mode" set? Did you set the correct network mode? Is Call forwarding set? Is "Auto reject mode" set?
Display is dark.	Is "Power saving mode" set?
Cannot hear the other party.	Is the earpiece volume too low?  Are you covering the earpiece with your ear?  Place your ear hole to the earpiece.
Cannot use Osaifu- Keitai <sup>®</sup> .	Has the battery run out?  Is "NFC/Osaifu-Keitai lock" set?  Do you hold the product so that the mark area is placed over the reader/writer?
Cannot recognize a microSD memory card.	Is a microSD memory card inserted properly? Is the microSD memory card unmounted?

τ	2
τ	
Ċ	Ď
Ė	5
C	כ
Ε	
3	۹
ď	_
Ξ	5
ē	5
ō	D
Š	5

Symptom	What you should check
	For Windows XP users, use Windows XP Service Pack 3 or later.
a media device.	Install Samsung Kies or later or Windows Media Player 10 or later to your PC.

If you checked items on Troubleshooting but symptom is not improved, contact the following au Customer Support site of au homepage:

http://www.au.kddi.com/support/mobile/trouble/repair

#### **Updating Software**

#### ■ Notes on software update

- When software update is necessary, you will be informed on au homepage, etc. For details, contact an au shop or Customer Service Center (call toll-free 157). In addition, users of the product will receive a notice from au, when software update is necessary to improve the functionality of the product.
- You are recommended to back up your data before updating software.
- Be sure to fully charge the battery pack before use.
   Updating software may fail if the battery level is low or becomes low while updating.
- Check the radio wave condition. Updating software may fail in poor reception areas.
- No operations can be made while updating. Calling to 110 (Police), 119 (Fire institution), 118 (Regional Coast Guard Headquarters) is not available, either. Alarm, etc. do not operate.
- If software update has failed or stopped, perform the same again.

 If you fail to update software, it may become impossible to operate the product. If this happens, bring it to an au shop or PiPit (not accepted by some shops).

#### Downloading and updating software

Update files can be downloaded from the Internet web site via wireless communication into the product directly.

- In the home screen, 🖃 → [Settings]
- "General" tab → [About device] → [Software update]

#### [Update]

From here on, follow the onscreen instructions.

If the confirmation screen of download appears, tap "OK".
 If "Wi-Fi settings" is tapped, make connection setting for wireless LAN (Wi-Fi®) function.



Data communication charge may be applied for automatic search.

## Connecting to a PC for updating software

You can update software via a PC using "Samsung Kies".

#### **After-sales service**

#### ■ When asking for repair

For repair, contact Secure cell phone support center.

During the warranty period	Repairs will be done based on the terms of services of the free-of-charge repair warranty described on the warranty card.
Outside the warranty period	We shall repair the product for a charge as requested by the customer if repair renders it usable.

## **//**memo

- Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost
- © Recycled parts that meet the Company's quality standards are sometimes used for repair.
- © Collected au cell phones by Replacement cell phone delivery service which you used before are recycled to cell phones for replacement after repairs. Also replaced parts by au aftersales service are collected and recycled by KDDI. They are not returned to customers.

#### **■** Performance parts for repair

The Company retains performance parts for repair of the GALAXY Note 3 main unit and its peripherals for four years after discontinuation of production. "Performance parts for repair" refers to parts required for maintaining the functions of the product.

#### Warranty card

At the store of purchase, thoroughly check and read the name of the retailer, date of purchase and other necessary details filled in on the warranty card, and be sure to keep it in a safe place.

#### ■ Secure cell phone support plus LTE

An after-sales service membership program on a monthly basis called "Secure cell phone support plus LTE" (monthly fee: 399 yen including tax) is available for using your au cell phone for a long time without worries. This service expands coverage for many troubles including malfunction, theft and loss. For details of this service, refer to au homepage or contact Secure cell phone support center.



- O You can apply for membership only at the time of purchasing your au cell phone.
- Once you cancel the membership, you cannot reapply for it until you purchase an au cell phone next time.
- Note that when changing the model or purchasing an extra cell phone, this service only covers the most recently purchased au cell phone.
- When an au cell phone is handed over to you or someone else, the Secure cell phone support plus LTE membership is also handed over to the successor of the cell phone.
- When you get a new au cell phone by changing the model or purchasing an extra cell phone, the "Secure cell phone support plus LTE" membership for the old au cell phone is automatically canceled.
- O Service contents are subject to change without notice.

#### ■ au Micro IC Card (LTE)

The au Micro IC Card (LTE) is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When malfunction is suspected, or in case of theft or loss, contact an au shop or PiPit.

#### ■ After-sales service

If you are unsure about anything regarding after-sales service, contact the following service contact.

#### **Customer Service Center**

(for service canceling procedure or operation in case of loss or theft)

From a land-line phone, **40077-7-113** (toll-free) From an au cell phone, **113** without area code (toll free)

Secure cell phone support center (for loss, theft, damage) From a land-line phone/From an au cell phone.

#### **£**10120-925-919 (toll-free)

Business hours 9:00-21:00 (7 days a week)

#### ■ au after-sales service information

Services	Secure cell phone support plus LTE			
	Members	Others		
Replacement cell phone	Replacement cell phone delivery service			
Spontaneous failure (1 st year)	Free of charge	No recompense		
Spontaneous failure (2nd year or later)	Customer charge 1 st: 5,250 yen			
Partially damage, water soak, irreparable damage, theft or loss	2nd: 8,400 yen			
Holding over and repair				
Spontaneous failure (1 st year)	Free of charge	Free of charge		

Services	Secure cell phone support plus LTE		
	Members	Others	
Spontaneous failure (2nd year or later)	Free of charge (for 3 years)	Actual cost	
Partially damage	Customer charge Upper limit: 5,250 yen		
Water soak, irreparable	Customer charge 10,500 yen		
Loss, theft	No recompense	No recompense (model change)	

<sup>\*</sup> Charge amounts are all tax-included.



#### Replacement cell phone delivery service

- When you have trouble with your au cell phone, replacement cell phone (same model, same color, including new battery) is delivered to the specified place by calling to. Return your damaged cell phone within 14 days after replacement cell phone is delivered.
- Available up to twice in a year from the day you use this service as a start day. If you do not use this service in the past year at the subscription to this service, it will be 1st and if you use, it will be 2nd.
- \* For details, refer to au homepage.

#### Holding over and repair

- Damages and malfunctions intentionally caused by the customer as well as those due to modification (e.g. disassembly, change of parts, painting, etc.) by the customer are not covered by this service.
- You cannot receive a refund for replacement of the outer casing due to stains, scratches, paint removal, etc. on the outer casing.

## Main specifications

Display		Approx. 5.7 inches Approx. 16,000,000 colors (Organic EL) 1920×1080 dots
Weight		Approx. 171 g (with battery pack attached)
Dimension (V	$V \times H \times T$ )	Approx. 79 mm×151 mm×8.3 mm (Thickest part: 9.8 mm)
CPU		MSM8974
System mem	nory	Approx. 25 GB
Continuous stand-by	In Japan	Approx. 490 hours: 3G Approx. 480 hours: LTE
time	Overseas (GSM/UMTS)	Approx. 560 hours
Continuous	In Japan	Approx. 1210 min.
call time	Overseas (GSM/UMTS)	Approx. 990 min.
Continuous tethering time		WAN 3G: Approx. 680 min. WAN LTE: Approx. 680 min.
Maximum number of tethering connection devices		Up to 11 devices (Wi-Fi tethering 10 devices, USB tethering 1 device)
Charging time		Common AC Adapter 04 (sold separately) Approx. 150 min. Common DC adapter 03 (sold separately) Approx. 480 min.
Camera	Image pickup device	CMOS
	Effective pixels	Out-camera: Approx. 13,200,000 pixels In-camera: Approx. 2,100,000 pixels
Wireless LAN (Wi-Fi®)		IEEE802.11a/b/g/n/ac-compliant*1

Bluetooth® function	Version	Bluetooth® standard Ver. 4.0+LE compliant
	Output	Bluetooth® standard Power Class 1
	Communication distance*2	Within 10 m with no obstacles in the range
	Compatible profiles*3	OPP (Object Push Profile) HSP (Headset Profile) HFP (Hands-Free Profile) A2DP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile) SPP (Serial Port Profile) PBAP (Phone Book Access Profile) HID (Human Interface Device Profile) PAN (Personal Area Networking Profile)* <sup>4</sup> DUN (Dial-up Networking Profile)* <sup>5</sup>
	Frequency bands	2.4 GHz band (2.402 GHz to 2.480 GHz)
1 Seg (Continuous watching time)		Approx. 7 hours 20 min.

- \*1 2.4 GHz and 5 GHz are supported for IEEE 802.11n.
- \*2 Changes according to objects obstructing devices and signal reception.
- \*3 Specifications provided in Bluetooth® standards for making communication between Bluetooth®-compatible devices in accordance with their intended use.
- \*4 PANU (PAN User) function can be used.
- \*5 This application supports part of car navigations. For details, refer to the au homepage.



The continuous talk time and continuous standby time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

# Specific Absorption Rate (SAR) of cell phones

This model GALAXY Note 3 mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves. This mobile phone has been designed in observance of the Japanese technical regulations regarding exposure to radio waves (\*1) and limits to exposure to radio waves recommended by equivalent international guidelines.

These international guidelines were set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition. The Japanese technical regulations and international guidelines define the limits using a unit of measurement known as the Specific Absorption Rate (SAR). which represents the average amount of radio frequency energy absorbed by the human head. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use at the ear is 0.172 W/ kg. There may be slight differences in SAR levels among individual products, but they all satisfy the limit. The actual SAR of this mobile phone while talking on the phone can be well below that indicated above. This is due to automatic changes in the power level of the mobile phone to ensure it only outputs the minimum power required to communicate with a base station. Therefore in general, the closer you are to a base station, the lower the power output of the mobile phone.

This mobile phone can be used in positions other than against your ear. This mobile phone satisfies the international guidelines when used with au Carrying Case G black (0106FCA) (sold separately) recommended by KDDI (\*2). In case you are not using the au Carrying Case G black (0106FCA) (sold separately), use a product that contains no metal parts, and one that can hold the mobile phone at least 1.5 cm away from your body.

The World Health Organization has stated that present scientific information does not indicate that use of mobile devices has any harmful effects on the human body. They recommend that if you are still worried about your exposure then you can limit your talk time or use a handsfree kit to keep the mobile phone away from your head and body. If you would like to know more detailed information, please refer to the WHO website.

#### (http://www.who.int/docstore/peh-emf/publications/facts\_ press/fact\_english.htm)

Please refer to the websites listed below if you would like to know more detailed information regarding SAR.

- Ministry of Internal Affairs and Communications website: http://www.tele.soumu.go.jp/e/sys/ele/index.htm
- Association of Radio Industries and Businesses website:
- http://www.arib-emf.org/index02.html (in Japanese only)

  O au homepage:

#### http://www.au.kddi.com/

○ SAMSUNG homepage:

#### http://www.samsung.com/ip/support/sar/sarMain.do

- \*1 Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).
- \*2 Regarding the method of measuring SAR when using mobile phones in positions other than against the ear, the international standard IEC62209-2 was set in March 2010. On the other hand, Japanese technical regulation is currently under deliberation by the Committee for Radio Wave Utilization Environment set up in the Information and Communication Technology Group of the Advisory Committee on Information and Communications. (As of October 2011)

#### **FCC Notice**

- This device complies with part 15 of the FCC Rules.
   Operation is subject to the following two conditions:
   (1) This device may not cause harmful interference, and
   (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

#### ■ Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient/relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.

## FCC RF exposure information

Your handset is a radio transmitter and receiver.

It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.22 W/kg and when worn on the body, as described in this user guide, is 1.09 W/kg.

#### **Body-worn operation**

This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of

http://www.fcc.gov/oet/ea/fccid/ after searching on FCC ID A3LSCL22.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Website at http://www.ctia.org/.

#### **European RF Exposure Information**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.169 W/kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. In this case, the highest tested SAR value is 0.207 W/kg.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

## **Declaration of Conformity**

#### ■ Product details

For the following

Product: GSM WCDMA LTE BT/WiFi Mobile Phone

Model(s): SCL22

**C € 0168①** 

#### ■ Declaration & Applicable standards

We hereby declare, that the product above is in compliance with the essential requirements of the R&TTE Directive (1999/5/EC) by application of:

SAFETY EN 60950-1:2006 + A12:2011

SAR EN 50360 : 2001 / A1 2012

EN 62209 - 1 : 2006 EN 62311 : 2008 EN 62209 - 2 : 2010 EN 62479 : 2010

EMC EN 301 489-1 V1.9.2 (09-2011)

EN 301 489-03 V1.4.1 (08-2002) EN 301 489-7 V1.3.1 (11-2005) EN 301 489-17 V2.2.1 (09-2012) EN 301 489-24 V1.5.1 (10-2010)

RADIO EN 301 511 V9.0.2 (03-2003)

EN 301 908-1 V5.2.1 (05-2011)

EN 301 908-2 V5.2.1 (07-2011)

EN 301 908-13 V5.2.1 (05-2011)

EN 300 328 V1.8.1 (06-2012)

EN 301 893 V1.7.1 (06-2012)

EN 300 440-1 V1.6.1 (08-2010)

EN 300 440-2 V1.4.1 (08-2010)

EN 302 291-1 V1.1.1 (07-2005)

EN 302 291-2 V1.1.1 (07-2005)

and the Directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

TÜV SÜD BABT, Octagon House, Concorde Way, Fareham, Hampshire, PO15 5RL, UK\*
Identification mark: 0168

#### ■ Representative in the EU

Samsung Electronics Euro QA Lab. Blackbushe Business Park Saxony Way, Yateley, Hampshire GU46 6GG, UK

#### 2013.09.16

(Place and date of issue)



#### Joong-Hoon Choi / Lab. Manager

(Name and signature of authorized person)

 This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

#### **Export Administration Regulations**

This product and its accessories may be subject to the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). In addition, U.S. Re-export Regulations (Export Administration Regulations) may apply to this product and its accessories. To export and re-export this product and its accessories, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry or the U.S. Department of Commerce.

#### **Trademarks**

The company names and product names appearing in this manual are trademarks or registered trademarks of their respective holders


microSD logo, microSDHC logo, microSDXC logo are

trademarks of SD-3C, LLC.







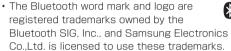



- Wi-Fi®, Wi-Fi Protected Setup™, Wi-Fi Direct™, Wi-Fi CERTIFIED™, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance
- Excel® and PowerPoint® are trademarks or registered. trademarks of Microsoft Corporation in the U.S.A. and other countries
- · Microsoft® Word is a product name of Microsoft Corporation in the U.S.A.
- FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark of Sony Corporation.
- $\Re$  is a registered trademark of FeliCa Networks. Inc.
- · Twitter is a trademark of Twitter, Inc., and is used under license
- Facebook® is a registered trademark of Facebook. Inc.
- "mixi" and "mymixi" are trademark and/or registered trademark of mixi. Inc.
- "Google", "Google" logo, "Android", "Android" logo, "Google Play", "Google Play" logo, "Gmail", "Google Calendar", "Google Chrome", "Google Wallet", "Google Maps",

- "Google+", "Google+ Local", "Picasa" and "YouTube" are trademarks or registered trademarks of Google Inc.
- · iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods, iWnn@OMRON SOFTWARE Co., Ltd. 2008-2013 All Rights Reserved.
- Microsoft® . Windows Media®. ActiveSvnc® are trademarks or registered trademarks of Microsoft Corporation in the USA and other countries
- · This software is based in part on the work of the Independent JPEG Group.
- · Oracle and Java are registered trademarks of Oracle Corporation and the subsidiaries and affiliate companies in the U.S. and other countries. Company and product names in this manual, etc., may be trademarks and registered trademarks of each company.
- DivX®, DivX Certified® and associated logos are registered trademarks of Rovi Corporation or its subsidiaries, and are used under license.
- · DLNA and DLNA CERTIFIED are trademarks of Digital Living Network Alliance.



- · "jibe" is a trademark of Jibe Mobile K.K.
- "GREE" is a registered trademark or trademark of GREE, Inc. in Japan.
- Rovi, G-GUIDE, G-GUIDE MOBILE and G-Guide related logos are trademarks or registered trademarks of Rovi Corporation and/or its subsidiaries in Japan.
- TRENDMICRO, VirusBuster are trademarks of Trend Micro Inc.
- · Copyright © 2010 Three Laws of Mobility. All Rights Reserved.



The product includes pictograms licensed by NTT

DOCOMO INC

· All other company names and product names are trademarks or registered trademarks of respective companies referred to in this manual.

#### ■ Regarding Windows notations

The names of operating systems (Japanese versions) used in this manual are as follows

- Windows 8 is the abbreviation for Mirosoft® Windows® 8. (Windows 8, Pro. Enterprise).
- Windows 7 is the abbreviation for Microsoft® Windows® 7 (Starter, Home Basic, Home Premium, Professional, Enterprise, Ultimate).
- Windows Vista is the abbreviation for Microsoft® Windows Vista® (Home Basic, Home Premium, Business, Enterprise, Ultimate).
- Windows XP is the abbreviation for Microsoft® Windows® XP Professional operating system and Microsoft® Windows® XP Home Edition operating system.

#### Others

The software installed on this product or part of it may not be altered, translated/adapted, reverse-engineered, decompiled or reverse-assembled and any such actions are prohibited. Under the MPEG-4 Visual Patent Portfolio License. customers have licensed permission for the following use of this product to engage in non-profit personal use. Other uses are not permitted.

- Recording MPEG-4 Visual standard video (henceforth referred to as MPEG-4 Video)
- Playing back MPEG-4 Video that a customer engaged in 78 personal and non-profit activities has recorded

 Playing back MPEG-4 Video obtained from a provider licensed by MPEG-LA

When using for promotion, in-house use, profit use, and other intended uses, contact MPEG LA, LLC.

• This product is licensed under the AVC patent portfolio license for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard (henceforth referred to as AVC video) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and noncommercial activity and/ or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA. L.L.C.

Visit http://www.mpegla.com

• This product is licensed under the VC-1 Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the VC-1 standard (henceforth referred to as VC-1 video) and/or (ii) decode VC-1 video that was encoded by a consumer engaged in a personal and noncommercial activity and/ or was obtained from a video provider licensed to provide VC-1 video.

No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA. L.L.C.

Visit http://www.mpegla.com

# Appendix/Inde

## Index

A		
Action Memo	. 34	
After-sales service	. 70	
Air command	. 35	
Airplane mode		
Applications39,		
au ID		
au International Call Service		
au Micro IC Card (LTE)		
Attaching/removing		
Authentication setting		
Addicitiod to 1 Secting	. 0-	
В		
Battery pack	. 27	
Battery pack	. 27	
Battery pack Attaching/removing	. 27	
Battery pack	27 <b>53</b>	
Battery pack	. 27 . <b>53</b> . <b>47</b>	
Battery pack	. 27 . <b>53</b> . <b>47</b> . <b>54</b>	
Battery pack	. 27 . <b>53</b> . 47 . 54	
Battery pack	. 27 . 53 . 47 . 54 . 46	

D
Declaration of Conformity 75
Direct call36
Direct pen input33
Disaster Information/Website
for Donation59
Double Tap32
Drag32
E
E-mail50
Changing E-mail address. 51
F
FCC Notice74
Flick32
G
0-11
Gallery 56
Gmail 52
· · · · •
Gmail 52
Gmail 52
Gmail
Gmail 52 Google account 31

I .
Icons
L
Long touch32
M
Mail         50           E-mail         50           SMS         51           microSD memory card         60           Attaching/removing         60           Format         61           Motion         36           Browse         36           Direct call         36           Mute/pause         36           Smart alert         36           Zoom         36
N
Notification panel45
Р
Phone47
Call47
Receive49
Pinch 32

PIN code ......20

Power on/off	30
PRL	65
Profile	54
PUK code	
R	
Related accessories	67
S	
Safety Precautions	6
Screen lock	31
Screen write	34
Secure cell phone support	plus
LTE	70
Security codes	20
Setting menu	63
Shooting	54
Still pictures	55
Video	56
Silent mode	64
Slide	32
Smart alert	36
SMS	51
Specific Absorption Rate (	SAR)
	73
Specifications	72
S Pen	33
Action Memo	34
Air command	35
Direct pen input	33
Replace	35
Screen write	34
Select input-text	34
Trim image	34

S PreviewStatus iconsStill picturesSwipeSystem setting	44 55 32	
Т		
Тар	32	
Touch panel		
Operation	32	
Trademarks	77	
Troubleshooting	68	
Turning the power on/off	30	
U		
Updating Software	69	
V		
Videos	56	
W		
Wireless LAN (Wi-Fi®) function		
	62	

#### For inquiries, call:

#### **Customer Service Center**

For general information and charges (toll free)

From fixed-line phones: | From au cell phones:

157 without area code

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR AFTER CALLING 157 ON YOUR au CELL PHONE.

#### For loss or theft and operation information (toll free)

From fixed-line phones: From au cell phones:

113 without area code

In case above numbers are not available, call toll-free:

0120-977-033 (except Okinawa) ft 0120-977-699 (Okinawa)

#### Secure cell phone support center

For loss, theft, damage (toll free)

From fixed-line phones/au cell phones,

0120-925-919

Business hours 9:00-21:00 (7 days a week)



Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the (2) logo regardless of brand and manufacturer to protect the environment and reuse valuable resources

October 2013 1st Edition Sold by: KDDI CORPORATION · OKINAWA CELLULAR TELEPHONE COMPANY Imported by: SAMSUNG ELECTRONICS JAPAN Co., Ltd. Manufactured by: Samsung Electronics Co., Ltd.